

# INSTRUCTION MANUAL

---

ProLuxe

*Veneto*™



[www.oakworks.com](http://www.oakworks.com) · 717.235.6807



Manual Part # MMMNST0016  
1st Edition, July 2009  
Printed in U.S.A.

All rights are reserved. No part  
of this document may be  
photocopied, reproduced or  
translated to another language  
without prior written consent  
of OAKWORKS®, Inc.

OAKWORKS® is a registered  
trademark of OAKWORKS®, Inc.

#### Notice

The information contained in this  
document is subject to change  
without notice and should not  
be construed as a commitment by  
OAKWORKS®, Inc.

OAKWORKS®, Inc. assumes no  
responsibility for any errors that  
may appear in this document nor  
does it make expressed or implied  
warranty of any kind with regard  
to this material, including, but not  
limited to, the implied warranties  
of merchantability and fitness for  
a particular purpose.

OAKWORKS®, Inc. shall not be liable  
for incidental or consequential  
damages in connection with or  
arising out of the furnishing,  
performance, or use of this  
document and the program  
material which it describes.

TABLE OF CONTENTS

Warnings & Symbol Identification ..... pg 4

Section I: Product Description & Table Specs .....pg 5

Section II: Directions for Use

- Blank page ..... pg 6
- Hand Control ..... pg 7
- Side Arm Rests ..... pg 8
- QuickLock™ Face Rest ..... pg 10
- Moving the Table ..... pg 11

Section III: Troubleshooting

- If Table Will Not Change Position ..... pg 12

Section IV: Care & Cleaning ..... pg 13

Section V Product Identification - Power Lead Cords ..... pg 14

Section VI: Electrical Specifications & Accessory Part No ..... pg 15

Contact Information ..... back cover

TABLE OF CONTENTS

**WARNINGS**



Improper use of this device can cause injury. Be sure to read all operating instructions prior to use.



Weight limit (patient and accessories): 550 lbs.



Be certain that the table is completely lowered without any tilt being present prior to discharging an ambulatory patient. The patient may lose balance and fall.



Electrical Shock Hazard. The power supply/control module is located below the base of the table. Refer servicing to qualified personnel. Unplug wall connector prior to contact with any cables connected to the power supply.



Plug table into an outlet that is surge protected to a level of 750J or higher. Failure to do this may void all or part of the warranty.

**SYMBOL IDENTIFICATION**



This symbol, when used in this manual and on product labels, represents a caution warning. Be sure to read and comply with all precautions and warnings.



This symbol, when used in this manual and on product labels, warns against an electrical shock hazard. Be sure to observe and comply with all warnings.



This symbol, when used in this manual or on product labels, indicates a Protective Earth (Ground) Terminal.



This symbol when used in this manual or on product labels, warns that during transport there should be no stacking of containers.



This symbol, when used in this manual or on product labels, indicates that the product should be protected from moisture. The humidity specifications for Transport & Storage are listed in the back of this manual.



This symbol, when used in this manual or on product labels, indicates that information is given regarding the recommended temperature limits during transport and storing.



This symbol, when used in this manual or on product labels, indicates the date of manufacture of the device.



This symbol, when used in this manual or on product labels, indicates alternating current (AC).



This symbol, when used in this manual or on product labels, indicates direct current (DC).



This symbol, when used in this manual or on product labels, indicates that instructional information is included. It should be read carefully and completely .

**PRODUCT DESCRIPTION**



PRODUCT DESCRIPTION

**TABLE SPECIFICATIONS**

- Height: 22" - 38"
- Width: 29", 31", 33"
- Length: 72"
- Lift Capacity: 550 lbs.
- Top: Electric Access Design Top
- Padding: AeroCel (standard), Plush
- Upholstery: TerraTouch, UltraTouch
- Electronics: (3) DC motors powered by a 24V control box with (1) low voltage hand control

**THIS PAGE INTENTIONALLY LEFT BLANK**

## DIRECTIONS FOR USE

## TABLE ADJUSTMENTS

- Hand Control

Hand Control: 6 positioning Buttons

The Hand Control on the Veneto operates all the positioning functions at the touch of a button. The buttons operate the customizable positioning of the backrest, foot rest and the table height.

 **CAUTION**

Do not sit on the elevated Back Rest or Leg Rest.

 **CAUTION**


When operating the controls and making any and all adjustments to the table, move hands and feet away from the working mechanism of the table.

 **CAUTION**

Children must be supervised when around this equipment by a responsible adult.

 **CAUTION**

When operating the controls be sure to observe all cautions and warnings given in the manual to prevent injury to both operator and client.

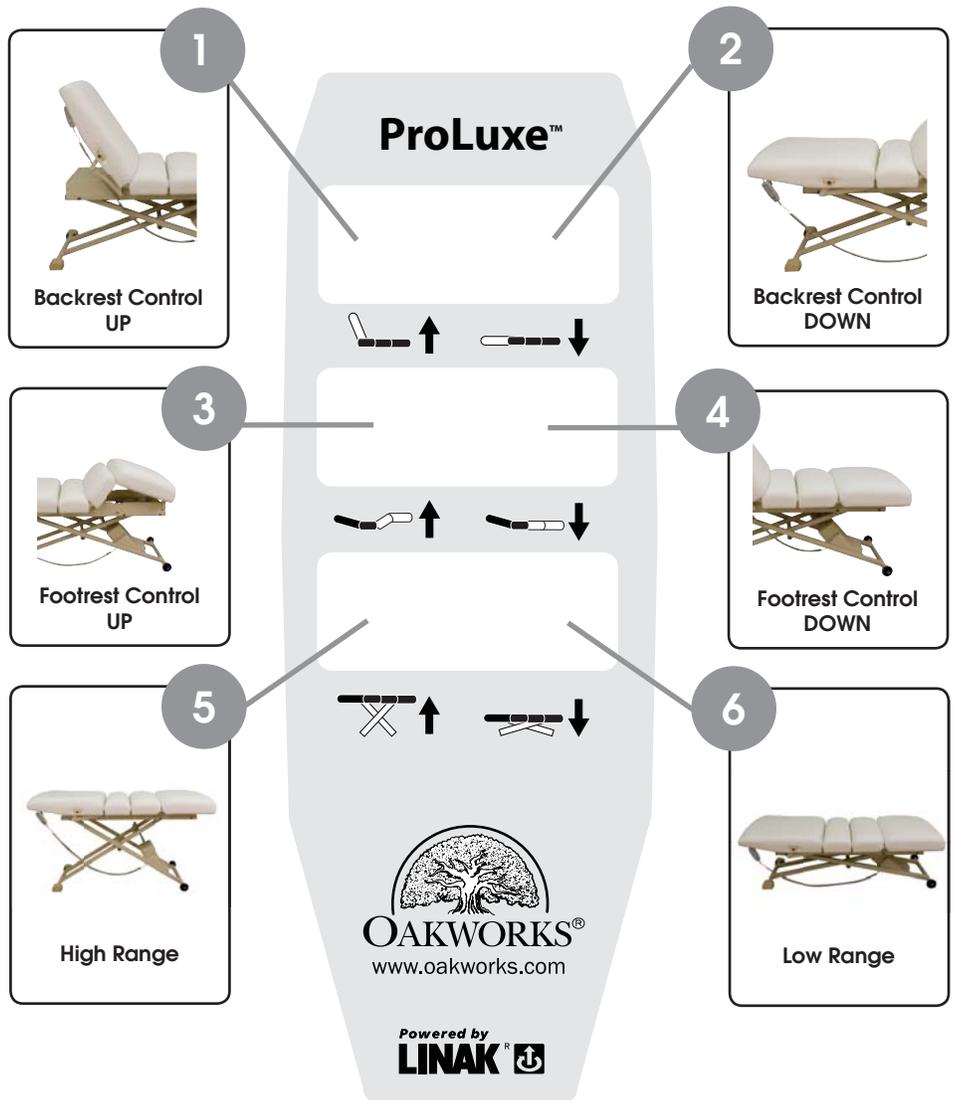

Press and hold the appropriate button until the position desired is achieved, then release.

## DIRECTIONS FOR USE

- Side Arm Rests

### IMPORTANT



### CAUTION

Do not sit on the Arm Rests.

Do not place excess weight on the Side Arm Rests. Do not use them in assisting the client on and off the table.

Either Arm Rest can be repositioned to allow a client to get on and off the table easily.

When making adjustments the arm rests make certain that the client's arms are away from the working mechanism.

## SIDE ARM RESTS

Though the arm rests adjust automatically to remain parallel to the seat in any position, there will still be times when you will need to move an arm rest out of the way or remove them altogether. We recommend that you raise the arm rest out of the way to allow a client to get on or off the table. They are designed to be strong and will take a reasonable amount of weight but they are not designed to be used to sustain a person's weight when getting on or off the table.

### To Adjust the Arm Rest:

First position the tabletop with the backrest in the upright position and all other section flat. Take hold of the arm rest firmly and raise the arm rest up and out of the way with a steady swing until the arm rest is in the highest upright position (see images below). Hold it in place until your client has mounted (or dismounted) and then actively move it back into the resting position where it will proceed to move automatically with the table top.

Adjusting the Side Arm Rest



The arm rest is now set and will adjust automatically as you position the client for whatever procedure is needed.

**DIRECTIONS FOR USE**

**SIDE ARMRESTS (CONTINUED)**

• Side Arm Rests

**IMPORTANT**



**CAUTION**

Do not sit on the Arm Rests.

Do not place excess weight on the Side Arm Rests. Do not use them in assisting the client on and off the table.

Either Arm Rest can be repositioned to allow a client to get on and off the table easily.

When making adjustments the arm rests make certain that The client's arms are away from the working mechanism.

There will be times when removal of the arm rests will be needed. This feature is helpful when doing massage or helping someone get on or off the table.

**To Remove the Arm Rest:**

To remove one or both arm rests just take hold of the base of the arm rest at the metal frame and somewhere on the cushion. Holding securely, rotate the arm rest while at the same time pulling slightly away from the table. You will feel the notched connection slide out as you rotate the arm rest. When you feel this you can then slide the entire arm rest out of the connection hole very easily. Store it safely until ready for installation.


Re-attach the armrest by sliding the arm rest frame into the hole on the backrest. Push it in securely and allow the arm rest to rest in the parallel position. This resets the arm rest in the proper position for the automatic adjustment feature to be activated.



**MANICURE ARM RESTS:**

The manicure arm rest installation follows the same standard installation and removal instructions as above.

- A. hand soak bowl installation
- B. hand soak bowl removal
- C. Manicure surface installation

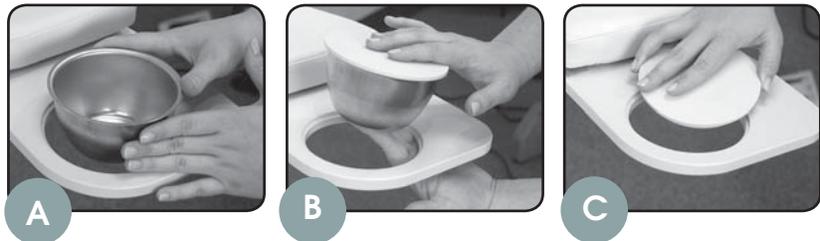

## DIRECTIONS FOR USE



Be sure to read all cautions, warnings and instructions given in the manual to prevent injury to both operator and client.



### SAFETY NOTE:

Do Not extend the dowels of the Face Rest further than 3" from the table edge to ensure a stable connection.



### CAUTION

Do not put excessive weight or pressure on the face rest. Excessive pressure can cause premature failure of the QuickLock™ Face Rest.

## QUICKLOCK™ FACE REST:

Be sure to use either the face rest or head rest for all treatments that require your client to lay flat. Double articulating action provides nearly limitless positioning options with the QuickLock™ Face Rest. The adjustable pad takes pressure off sensitive facial areas while providing superb support. The QuickLock™ Face Rest can be used in both prone and supine positioning and folds out of the way when not in use. Adjustments are made easily by loosening the cam locks, adjusting for height and angle and then locking the cam locks into that position.

Attaching the QuickLock™ Face Rest:


\* U.S. Patent #5,177,823

When attaching the QuickLock™ Face Rest, just slide the frame dowels into the holes in the head rest end of the table. Be sure to keep the 1st cam lock within 3" of the table to ensure a stable connection. To remove the QuickLock™ Face Rest, just pull the frame from the table until it comes free. Set it safely aside.



Tips for Great Positioning using the QuickLock™ Face Rest:

- The face pad is flexible so that you can bring the open ends together or spread them apart to achieve the most comfortable support for any size face. To avoid your client's chin from hitting the spacebar, make sure the pad is narrow enough to support their whole face.

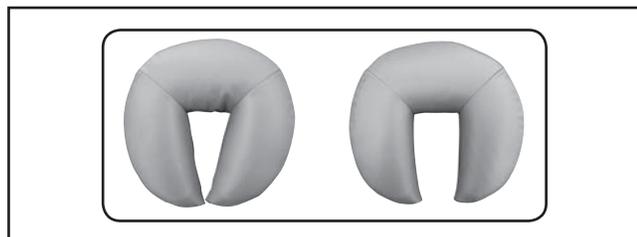

- For appropriate cervical flexion, use the cam locks to adjust the downward angle of the face rest, making sure that the surface of the face rest pad at the chin is not lower than the surface of the table.

## DIRECTIONS FOR USE

## MOVING THE TABLE

The table is equipped with two wheels at one end and two self-locking, molded rubber feet at the other. When ready to move the table, first lower the table to its lowest position. Then be sure the power source is disconnected. Place the cord out of the way on top of your table before moving the table.

## IMPORTANT

**CAUTION**

Before moving the table, disconnect the power cord from the power outlet.

Two people are needed to safely move the table. Grasp the table at the brace between the molded rubber feet at the head end of the table. By grasping the table frame firmly at this point, you can raise the table to allow the wheels at the foot end to move freely. Use proper positioning when raising the table by bending at the knees before lifting. This prevents back strain or possible injury.



Be sure to read all cautions, warnings and instructions given in the manual to prevent injury to both operator and client.

**CAUTION**

The table weighs as much as 175 lbs. Use extreme caution when lifting the table to move it. Two people are needed to move the table safely. Be sure to bend from the knees to prevent back strain and possible injury.



Move the table carefully to the next location, lower the table and release. Check the self-locking molded rubber feet to be sure they are flat side down. This is the position that “locks” the table into position and allows sturdy height adjustments. Connect the power cord to the outlet and test the controls. Adjust to suit your needs.

## IMPORTANT

Be sure self-locking molded rubber feet are flat side down to ensure safety and stability.



## TROUBLESHOOTING

## IF THE TABLE WILL NOT CHANGE POSITION

- Controls

**IMPORTANT****CAUTION**

The table weighs as much as 175 lbs. DO NOT lift or move the unit without using proper safety procedures or equipment. DO NOT turn the Veneto on its side for any reason. To do so could cause damage to the base and will void the warranty. There are no serviceable items that need this action.



Be sure to read all cautions, warnings and instructions given in the manual to prevent injury to both operator and client.

If the table will not change position:

- Check the outlet to be sure that it has power and that the power cable is plugged in. Try each foot control and hand control to see if any work. If any work, then possibly there is a loose connection or a faulty controller.
- Unplug the power cable from the wall outlet.
- Make sure that all male and female connectors are firmly pushed into each other. Even a slight misconnection can cause a possible malfunction.
- Plug the unit back into the wall and check the controls again. If none work, then contact customer service.

Questions to ask before calling Customer Service:

- Is the unit plugged in?
- Does the outlet have power?
- Check all connections of the control box, is everything seated securely?
- Does the height of the table change when you press on the hand control?
- Does the top work when you use the hand control?
- Is the control box green light on?

## CARE & CLEANING

### HOW TO CARE FOR YOUR UPHOLSTERY

In order to maintain the quality and ensure the life of the table, here are some preventative steps that can be taken to protect the upholstery on the table and accessories.

#### • Upholstery

- Protect your table and accessories with sheets and fleeces. We offer both fitted sheets and thick fleeces that protect your upholstery fabric against oil stains while offering comfortable 100% cotton flannel softness to your clients. You can also preserve your face rest and bolsters with 100% cotton flannel covers and fleeces.
- Clean your upholstered items only when needed with a mild detergent or Green Windex. A diluted 1/100 bleach solution for disinfecting can be used. Dry the table immediately after cleaning to remove excess cleaning solution. Using strong cleaners, such as alcohol, acetone, higher concentrations of bleach or other products that contain high concentrations of these substances, can shorten the life of your fabric, or discolor it. *Note: Damage caused by them will not be covered under the warranty.*
- Avoid extremes in heat. Very cold temperatures can make your fabric prone to cracking. Very high temperatures can cause the fabric to stretch permanently.
- Avoid exposing your products to direct sunlight for extended periods of time. This can lead to fading and cracking of the fabric.
- Use an anti-slip pad to prevent oil from reaching the upholstery and to keep your sheets from slipping.

### GENERAL CARE OF EQUIPMENT COMPONENTS



#### • Base & Controls

- Use only a mild solution of 4:1 diluted non-alcohol cleaner such as 409®, Fantastik® or some other non-abrasive cleaner to wipe down the metal surfaces of the chair. Apply with a damp (not wet) lint-free cloth. Be sure excess liquid does not drip onto, or into, any of the electrical controls or mechanisms. Be sure that the unit is unplugged before cleaning these areas. Wipe these areas carefully with a lint free cloth.
- The electronic powering mechanism of your table requires no general maintenance or lubrication.
- The wooden portions of the equipment can be polished with any polish approved for wooden surfaces. Spray, or pour, the polish onto a soft cloth and be careful not to get it onto other surfaces.

## PRODUCT IDENTIFICATION

- Plugs

### POWER LEAD PLUGS

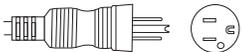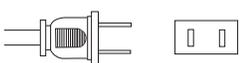OAKWORKS® Part #:	Voltage (AC)	Power Cord Plug
5097-11	120v 60 Hz	3 prong grounded hospital grade; North America 
5097-3	220v 50 Hz	Continental Plug; Europe 
5097-4	220v 50 Hz	Swiss plug; Switzerland 
5097-2	220v 50 Hz	British plug; United Kingdom 
N/A (Plug comes w/Control Box; order Control Box pn #4046-3)	100v 50/60 Hz	2 prong polarized plug; Japan & Korea 

**SPECIFICATIONS**

**ELECTRICAL SPECIFICATIONS**

Designed For:	North America	Europe	Japan/Korea
Input Service	60 Hz/120 VAC/15amps	50 Hz/220 VAC/10amps	50/60 Hz/100 VAC/15amps
Current Draw	2.7 amps	1.5 amps	3.3 amps
Maximum Momentary Current Draw	9.0 amps	5.0 amps	11.0 amps
Voltage Output (control box)	24 VDC	24 VDC	24 VDC
Power Consumption	70 watts	70 watts	70 watts
Electric Shock Protection	Class 1 Equipment	Class 1 Equipment	Class 1 Equipment
Tabletop Applied Part	 Type B Applied Part	 Type B Applied Part	 Type B Applied Part
Table Top IEC 529 Rating	IPX0	IPX0	IPX0
Mode of Operation	Continuous Operation @ 10% Duty Cycle	Continuous Operation @ 10% Duty Cycle	Continuous Operation @ 10% Duty Cycle

Part No.	Accessory Description
18003-xx	Side Armrests (2, includes frame & cushions)
18005-xx	Manicure Arm Rests
0218 2410-xx	QuickLock™ Face Rest (2 parts) - Platform (1) - Crescent Face Rest Pad(1)

xx indicates fabric type; -03 is UltraTouch, -06 is TerraTouch

Storage & Transport	 Temperature: 32° - 100° F 0°-38° C	Humidity: 60% relative humidity		Pressure: no limitations known
	During transport, DO NOT stack containers.			

# ProLuxe *Veneto*<sup>™</sup> INSTRUCTION MANUAL

---

## CONTACT INFORMATION:

### **OAKWORKS<sup>®</sup> Inc.**

923 East Wellspring Road  
New Freedom, PA 17349

Toll Free (USA only): 800-916-4613  
Phone: 717-235-6807

FAX: 717-235-6798

**[www.oakworks.com](http://www.oakworks.com)**



European Compliance for CE Information:  
Emergo Europe  
Molenstraat 15  
The Hague, 2513 BH Netherlands  
[info@emergogroup.com](mailto:info@emergogroup.com)

Manual Part Number MMMNST0016  
Revision date: 07.16.09  
Edition 1, English  
Printed in USA

