

USER MANUAL

---

**OAKWORKS®**

# ProLuxe Series



[www.oakworks.com](http://www.oakworks.com) · 717.235.6807



**OAKWORKS®** Spa

Printed in U.S.A.

All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without prior written consent of OAKWORKS®, Inc.

OAKWORKS® is a registered trademark of OAKWORKS®, Inc.

#### Notice

The information contained within this document is subject to change without notice and should not be construed as a commitment by OAKWORKS®, Inc.

OAKWORKS®, Inc. encourages requests for technical specifications and the like documentation to ensure accuracy. The appropriate documentation is available upon request.

OAKWORKS®, Inc. shall not be liable for incidental or consequential damages in connection with or arising out of the furnishing, performance, or use of this document and the program material which it describes.

# TABLE OF CONTENTS

---

- Product Use Description ..... 1
- Important Safety Instructions
  - Symbol Identification ..... 1
  - Safety Instructions ..... 2-3
- Installation ..... 4
  - Grounding ..... 4
- Product Description & Photo
  - ProLuxe Electric Salon Top ..... 5
  - Control Operation - ProLuxe Electric Salon Top ..... 5
  - ProLuxe Lift Assist Salon Top ..... 7
  - Controls Operation - ProLuxe Lift Assist Salon Top ..... 8
  - ProLuxe Lift Assist Backrest Top ..... 9
  - Controls Operation - ProLuxe Lift Assist Backrest Top ..... 10
  - ProLuxe Flat Top ..... 11
  - Controls Operation - ProLuxe Flat Top ..... 12
- Directions for Use
  - Adjusting the Back Rest section ..... 13
  - Adjusting the Leg Rest section ..... 13
  - Moving the table ..... 14
  - Dual Locking Casters Use ..... 14
  - Removing Top Pad ..... 15
  - Adjustable Breast Comfort (ABC) System (Option) ..... 16
  - Integrated Heated Top (Option) ..... 17
  - QuickLock Face Rest (Accessory Option) ..... 18
  - Adjustable Side Arm Rests (Accessory Option) ..... 19
- Cleaning & Disinfection
  - Recommended Cleaners/Disinfectants ..... 20
  - Cleaning Process ..... 20
- Inspections & Maintenance ..... 21
- Warranty Information ..... 21
- Model Number & Serial Number
  - ProLuxe Series ..... 22
- Specifications
  - Table Dimensions ..... 23
  - Product Specifications ..... 24
  - Environmental Conditions ..... 24
  - Electrical Specifications ..... 24
  - Guidance and manufacturer’s declaration -
    - Electromagnetic emissions ..... 25
    - Recommended separation distances ..... 25
  - Guidance and manufacturer’s declaration -
    - Electromagnetic immunity ..... 26-27
- Contact Information ..... back cover

---

# PRODUCT USE DESCRIPTION / IMPORTANT SAFETY INSTRUCTIONS

---

## PRODUCT USE DESCRIPTION

Oakworks ProLuxe Series offers a variety of positioning capabilities for massage therapists and spa professionals of all specialties. On these multifunctional professional tables, the practitioner can perform numerous protocols with ease and comfort. The fully electric ProLuxe Series is especially effective when professional protocols require specific positioning for the client. While the client receives comfortable, relaxing support, the comfort level of the therapeutic professional is enhanced by superior ergonomics.

It is intended to be operated by Massage Therapists in a professional environment. No special training is required but a review of the following Safety Instructions is important for the safety of the operator and client. The massage professional should read and understand this entire manual before use with a client. There are no known contraindications to the use of this equipment.

The ProLuxe Series should not be used in any other manner than that described within this manual. Use of any unnecessary force or unauthorized procedures could result in injury to practitioner, client or equipment.

## SYMBOL IDENTIFICATION



This symbol, when used in this manual and on product labels, represents a caution warning. Be sure to read and comply with all precautions and warnings.



This symbol, when used in this manual and on product labels, warns against an electrical shock hazard. Be sure to observe and comply with all warnings.



This symbol, when used in this manual or on product labels, indicates a Protective Earth (Ground) Terminal.



This symbol, when used in this manual and on product labels, indicates the name and address of the manufacturer.



This symbol, when used in this manual or on product labels, indicates the country of manufacture along with date of manufacture of the device next to it.



This symbol, when used in this manual or on product labels, indicates alternating current (AC).



This symbol, when used in this manual or on product labels, indicates direct current (DC).



This symbol is used to indicate that the operator should consult the user manual.

# IMPORTANT SAFETY INSTRUCTIONS

---

## IMPORTANT SAFETY INSTRUCTIONS



### DANGER

READ AND SAVE THESE INSTRUCTIONS

To reduce risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning.
2. Connect this furnishing to a properly grounded outlet only. See Grounding Instructions in this manual.

Electrical Shock Hazard - The power supply/control module is located on the lift frame. No user serviceable parts are inside. Refer servicing to qualified personnel. Unplug wall plug prior to contact with any cables connected to the power supply.



### WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. Unplug from outlet before adding or removing parts.
2. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact Oakworks Customer Service before use at 717.235.6807.
3. Keep the cord away from heated surfaces.
4. Never drop or insert any object into any opening.
5. Do not use outdoors.
6. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
7. To disconnect, turn all controls to the off position, then remove plug from outlet.
8. Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician if you are in doubt as to whether the product is properly grounded.
9. Do not modify the plug provided with the product - If it will not fit the outlet, have a proper outlet installed by a qualified electrician



### WARNING

- Risk of Injury - 550 lbs. (250 kg.) maximum load.
- Risk of Injury - Do not operate this equipment unless properly trained.
- Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
- This unit is For Commercial Use Only and to be operated only by trained personnel..
- Lifting & Top motion electric motors are rated at 10% duty cycle max. (2 minutes on, 18 minutes off)



### PINCH HAZARD

- Keep hands, feet and controls away from the table while making adjustments.
- Risk of Injury - Not to be used in locations where children or people with cognitive disabilities are anticipated to be present.
- Risk of Injury - Children should NEVER be near the table when in use.

## IMPORTANT SAFETY INSTRUCTIONS

---

### ENTRAPMENT

- Risk of Injury - The picture below indicate areas of entrapment that can occur when operating this equipment. It is the responsibility of the operator to ensure that bystanders are not in or around these areas during operation.



### CAUTION

- The use of accessories, transducers, and cables other than those specified by the manufacturer, may result in increased emissions or decreased immunity of the table.
- The table should not be used adjacent to or stacked with other equipment. If adjacent or stacked use is necessary, the table should be observed to verify normal operation in the configuration in which it will be used.
- The table is designed to be a stand-alone table. This table must not be modified or incorporated into any other equipment.
- Proper operation of this equipment is very important for the safety of the operator, client, and any other individuals in the area of this equipment. Directions for use of this equipment are described in this manual. The operator should read these sections carefully.
- Weight Limit: (client and accessories) 550 lbs. (250 kg.) Do not exceed.
- Adjustable Breast Comfort (ABC) System Weight Limit: 100 lbs. (45 kg.)
- Do not sit on the ABC System. Only use the ABC System as intended. Do not place foreign objects into the ABC System. For safety of your client, use a cloth sheet between the ABC System and your client.
- Be certain that the table is completely lowered without any tilt being present prior to discharging an ambulatory client. The client may lose balance and fall.
- When lowering the table, make sure there is nothing underneath the tabletop that can impede motion (like stools, cabinets, accessory parts, cleaners, etc.) When using the table Height Up function, do not place anything between the metal frame and the base structure. Damage can occur to the table.
- Do not sit on backrest or footrest sections.
- Before moving any of the tables, disconnect the power cord from the power outlet.
- The table weighs as much as 200 lbs. (91 kg.)
- Do not lift table by the tabletop pad. This can damage the removable pad. Use extreme caution when lifting the table to move it. 2 people are required to move the table safely.
- Do not use the table to transport a client.

# INSTALLATION

The Tables come completely assembled and ready to use. Plug the cord into a functioning outlet that is rated for the table. (See Grounding below)

Arrange the power cord and control cords so that they will not create a tripping hazard and where the controls are located to your liking and are conveniently accessible.

Be sure access to plug is not blocked for disconnecting the table from power.


## GROUNDING



**DANGER** Risk of Electric Shock - Connect this furnishing to a properly grounded outlet only.

Grounding for 120 Volt products:

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug shown below. See Grounding Methods - US 120V Example. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

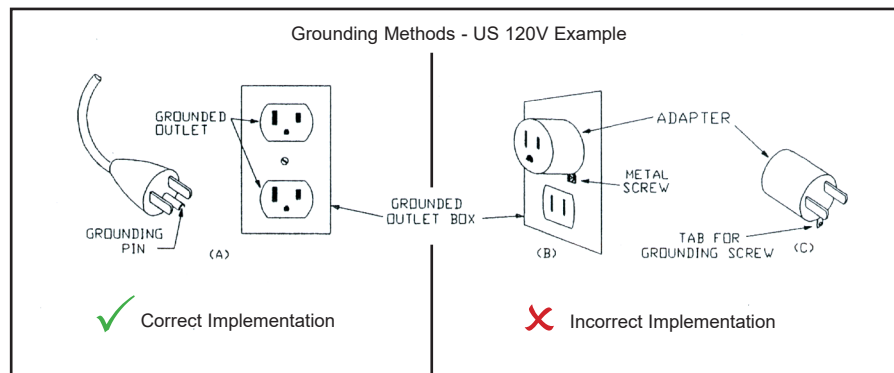

Grounding for 230 Volt products:

This product is rated for less than 15 amperes and is for use on a circuit having a nominal rating of 230 volts and is factory-equipped with specific electric plug to permit connection to a proper circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used.

## PRODUCT DESCRIPTION

### **ProLuxe** *Electric Salon Top*



STANDARD SPECIFICATIONS	
Motion 1*	Powered 22"-40" (57-102 cm.) Height Range
Motion 2	Powered 0-70° Backrest
Motion 3	Powered 0-30° Foot Rest
Foot Control	All powered motions
Table Voltage Options	120V/60Hz - 230V/50Hz
Table Capacity	550 lbs. (250 kg.) (client and accessories)
Widths	29" (74 cm.), 31" (79 cm.), or 33" (84 cm.)
Length	73" (185 cm.)
Padding	4" (10 cm.) or 6" (15 cm.) Aerocel Foam™
Table Weight	200 lbs. (91 kg.)

OPTIONS
Adjustable Breast Comfort (ABC) System
Dual Locking Casters
Integrated Heated Top
ACCESSORIES
QuickLock Face Rest
Boiance Shelf Support
Side Arm Rests

For electrical specs, see Specifications section.

# DIRECTIONS FOR USE





## CONTROL OPERATIONS - ELECTRIC SALON TABLE



### CAUTION

Do not sit on the backrest or leg rest sections. Be sure the self-locking molded rubber feet are flat side down to ensure safety and stability. The hood area under the backrest top is not designed for storage. DO NOT use this area for holding anything. Damage can occur to the table.

The ProLuxe Electric Salon Tables offer height, backrest, footrest, and optional ABC positioning with electronic ease. Operate the foot and/ or optional hand control as shown below to raise or lower the height, backrest, footrest, or optional ABC functions of the table.

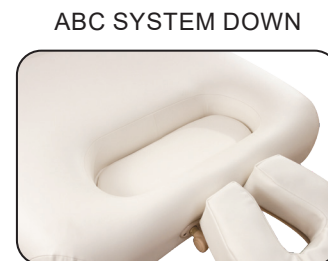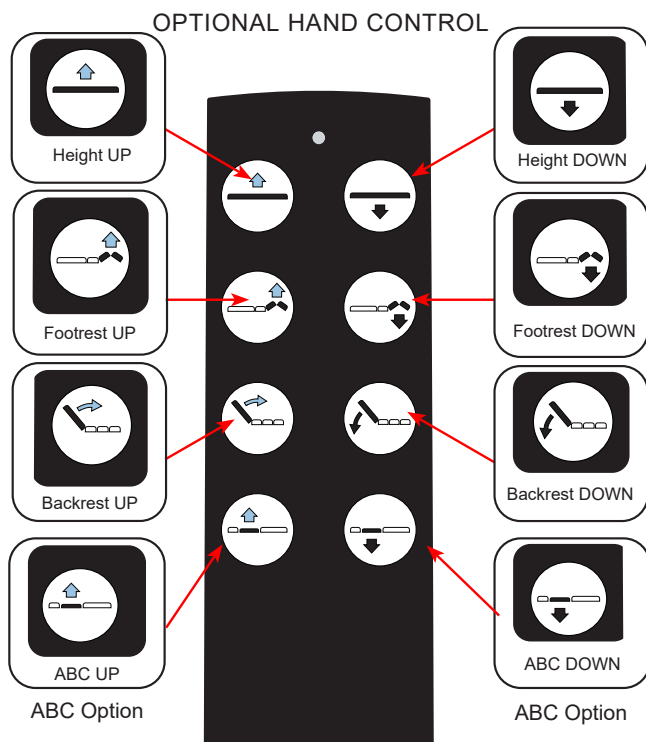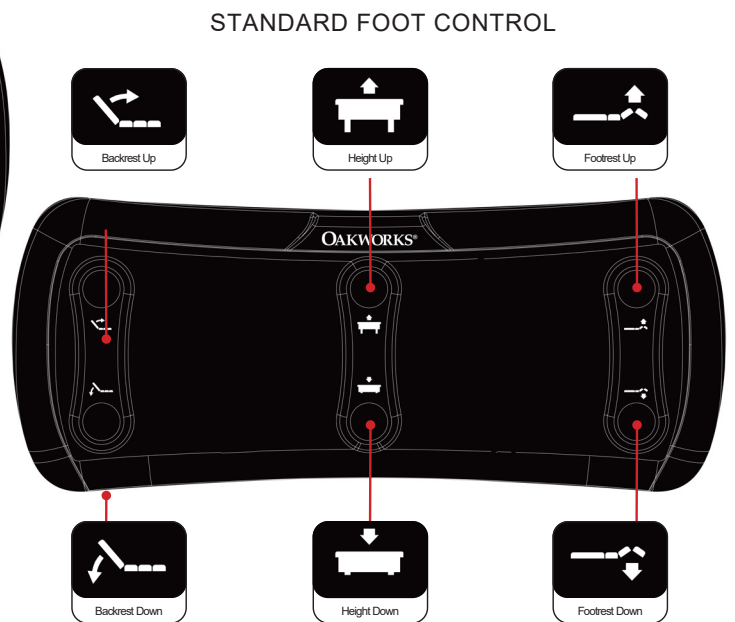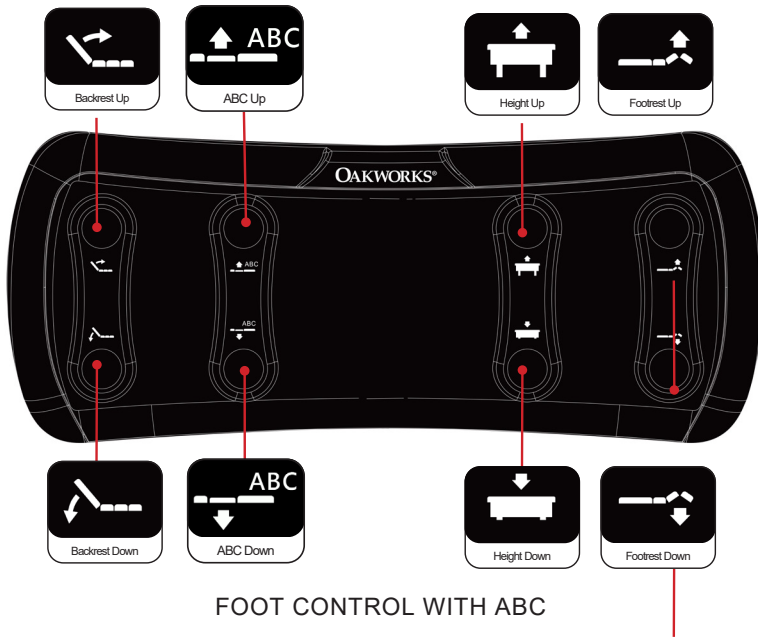

## PRODUCT DESCRIPTION

### **ProLuxe**

#### *Lift-Assist Salon Top*



STANDARD SPECIFICATIONS	
Motion 1*	Powered 22"-40" (57-102 cm.) Height Range
Motion 2	Manual 0-80° Backrest
Motion 3	Manual 0-30° Foot Rest
Foot Control	Height Range
Table Voltage Options	120V/60Hz - 230V/50Hz
Table Capacity	550 lbs. (250 kg.) (client and accessories)
Widths	29" (74 cm.), 31" (79 cm.), or 33" (84 cm.)
Length	73" (185 cm.)
Padding	4" (10 cm.) or 6" (15 cm.) Aerocel Foam™
Table Weight	190 lbs. (86 kg.)

OPTIONS
Adjustable Breast Comfort (ABC) System
Dual Locking Casters
Integrated Heated Top
ACCESSORIES
QuickLock Face Rest
Boiance Shelf Support
Side Arm Rests


For electrical specs, see Specifications section.

# DIRECTIONS FOR USE


## CONTROL OPERATIONS - LIFT-ASSIST SALON TABLES

**CAUTION** Do not sit on the backrest or footrest sections. Be sure the self-locking molded rubber feet are flat side down to ensure safety and stability. The hood area under the backrest top is not designed for storage. DO NOT use this area for holding anything. Damage can occur to the table.

The ProLuxe Lift-Assist Salon tables offer height positioning with electronic ease. Operate the foot and/or optional hand control as shown below to raise or lower the height of the table and operate the optional ABC.

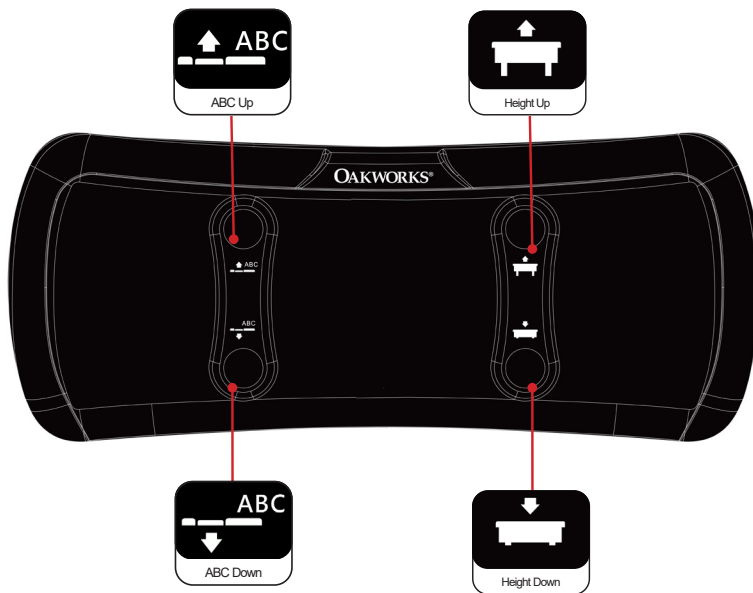

FOOT CONTROL WITH ABC

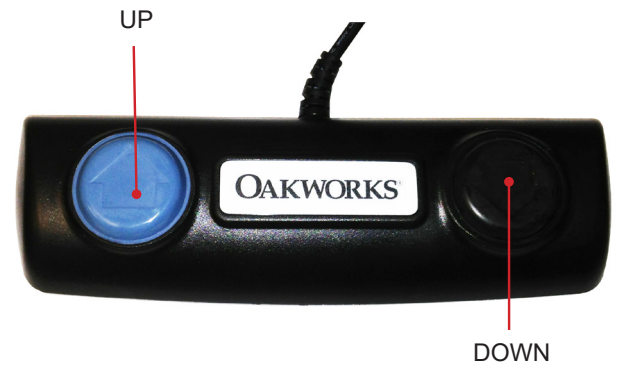

STANDARD FOOT CONTROL


ABC SYSTEM UP



ABC SYSTEM DOWN



OPTIONAL HAND CONTROL

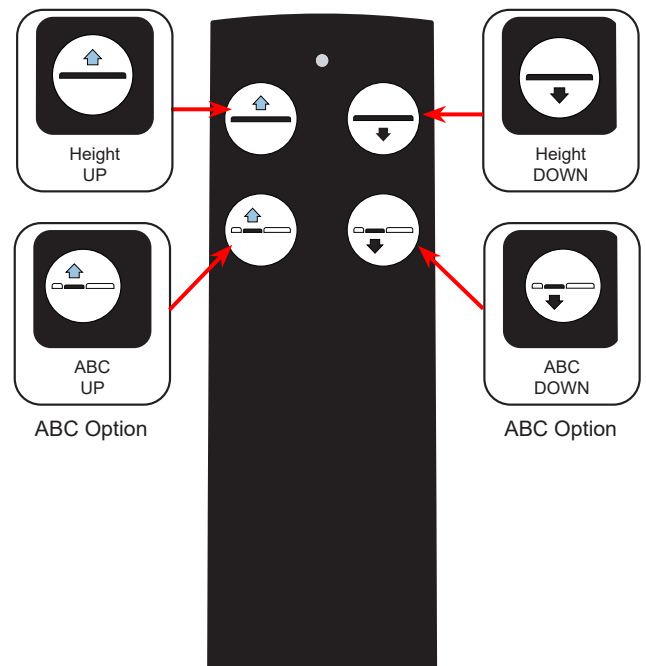

## PRODUCT DESCRIPTION

### **ProLuxe**

#### *Lift-Assist Backrest Top*



STANDARD SPECIFICATIONS		OPTIONS
Motion 1*	Powered 19"-36.5" (48-93 cm.) Height Range	Adjustable Breast Comfort (ABC) System
Motion 2	Manual 0-80° Backrest	Dual Locking Casters
Foot Control	Height Range	Integrated Heated Top
Table Voltage Options	120V/60Hz - 230V/50Hz	ACCESSORIES
Table Capacity	550 lbs. (250 kg.) (client and accessories)	QuickLock Face Rest
Widths	29" (74 cm.), 31" (79 cm.), or 33" (84 cm.)	Boiance Shelf Support
Length	73" (185 cm.)	
Padding	4" (10 cm.) or 6" (15 cm.) Aerocel Foam™	
Table Weight	180 lbs. (82 kg.)	

For electrical specs, see Specifications section.

# DIRECTIONS FOR USE



## CONTROL OPERATIONS - LIFT-ASSIST BACKREST TABLES



### CAUTION

Do not sit on the backrest section. Be sure the self-locking molded rubber feet are flat side down to ensure safety and stability. The hood area under the backrest top is not designed for storage. DO NOT use this area for holding anything. Damage can occur to the table.

The ProLuxe Lift-Assist Backrest tables offer height positioning with electronic ease. Operate the foot and/or optional hand control as shown below to raise or lower the height of the table and operate the optional ABC.

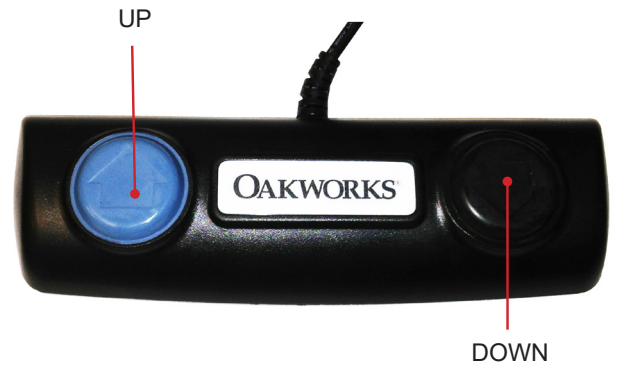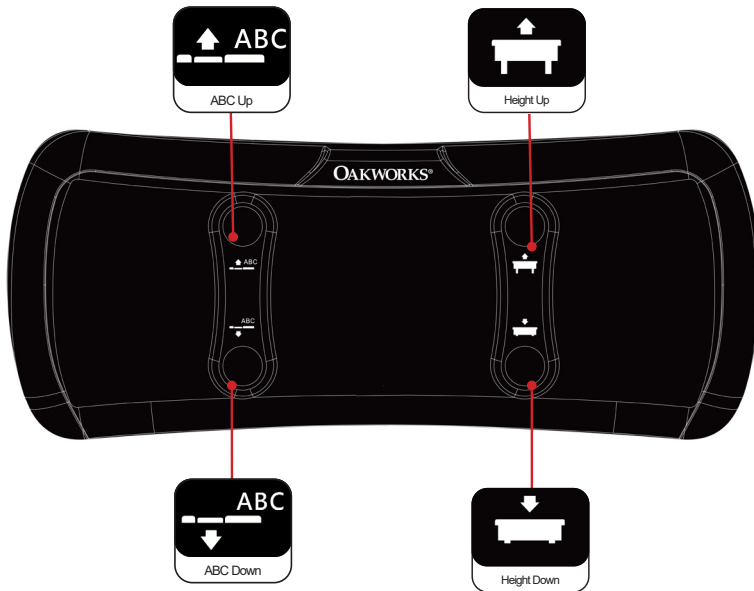

STANDARD FOOT CONTROL

FOOT CONTROL WITH ABC


ABC SYSTEM UP



ABC SYSTEM DOWN



OPTIONAL HAND CONTROL

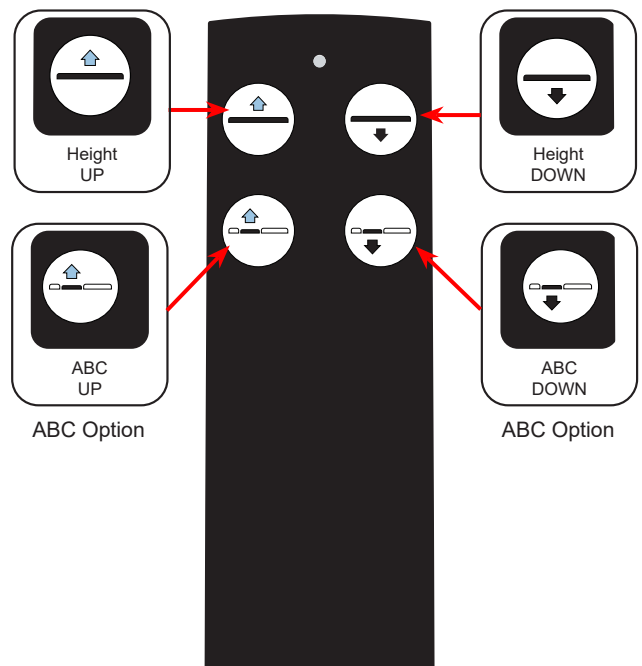

# PRODUCT DESCRIPTION

## **ProLuxe** *Flat Top*



STANDARD SPECIFICATIONS	
Motion 1*	Powered 19"-36.5" (48-93 cm.) Height Range
Foot Control	Height Range
Table Voltage Options	120V/60Hz - 230V/50Hz
Table Capacity	550 lbs. (250 kg.) (client and accessories)
Widths	29" (74 cm.), 31" (79 cm.), or 33" (84 cm.)
Length	73" (185 cm.)
Padding	4" (10 cm.) or 6" (15 cm.) Aerocel Foam™
Table Weight	170 lbs. (70 kg.)

OPTIONS
Adjustable Breast Comfort (ABC) System
Dual Locking Casters
Integrated Heated Top
ACCESSORIES
QuickLock Face Rest
Boiance Shelf Support


For electrical specs, see Specifications section.

# DIRECTIONS FOR USE


## CONTROL OPERATIONS - FLAT TOP TABLES

**CAUTION** Be sure the self-locking molded rubber feet are flat side down to ensure safety and stability.

The ProLuxe Flat Top tables offer height positioning with electronic ease. Operate the foot and/or optional hand control as shown below to raise or lower the height of the table and operate the optional ABC.

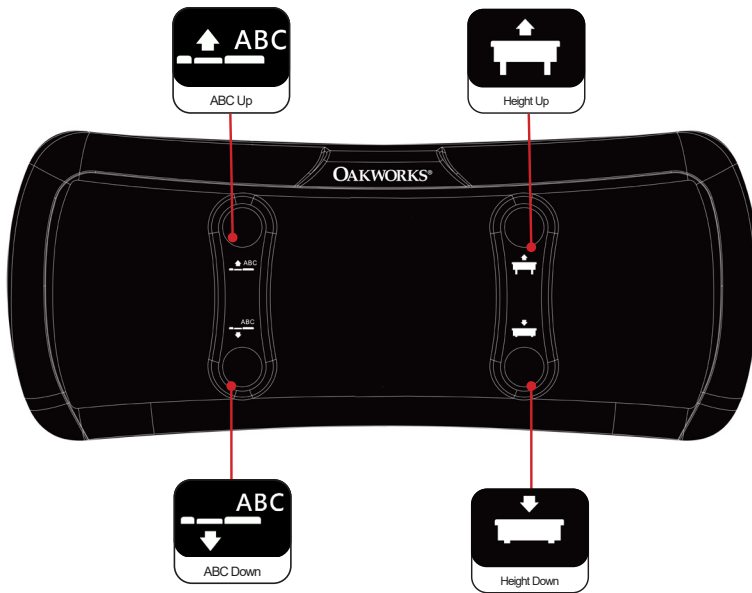


FOOT CONTROL WITH ABC

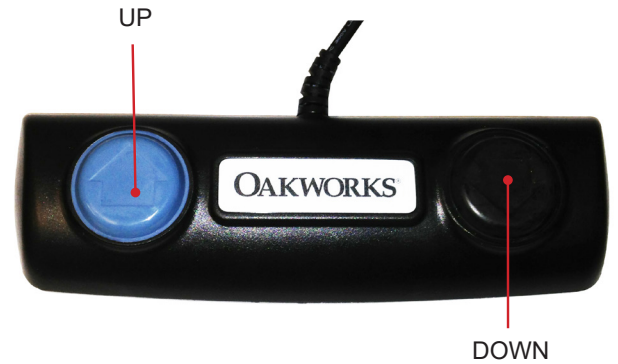

STANDARD FOOT CONTROL




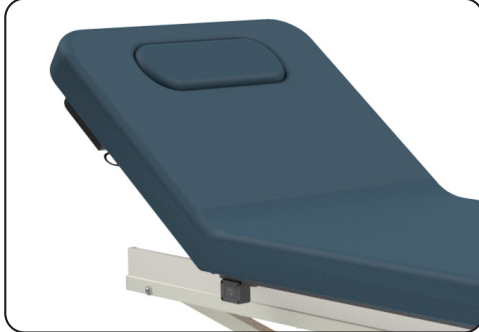
OPTIONAL HAND CONTROL

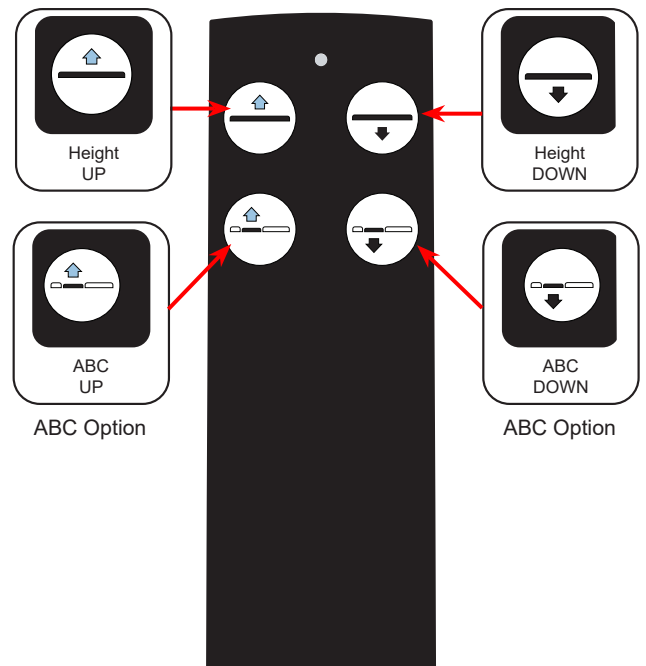

## DIRECTIONS FOR USE

### LIFT-ASSIST BACKREST ADJUSTMENT

 **CAUTION** Do not sit on the backrest section.



#### TO RAISE THE BACKREST

Raise the back rest by pressing the lever under the head section and lifting up to the desired height. It is recommended that clients take some of their weight off the back rest while you lift.



#### TO LOWER THE BACKREST:

Press the lever under the head section and push the back rest down.

#### TO CHANGE POSITION OF THE BACKREST LEVER

The backrest lever can be moved to the opposite side of the back rest by removing the screws and relocating the hand lever to the opposite side of the top into the four pre-drilled holes.

### LIFT-ASSIST LEG REST ADJUSTMENT



#### TO RAISE THE LEG REST

Raise the leg rest by pulling the lever on the side of the leg section and raise to the desired height. It is recommended that clients take some of their weight of the leg rest while you lift.



#### TO LOWER THE LEG REST

Pull the lever on the side of the leg section and push the leg section down. Release the lever once the leg rest is at its desired location and the leg section will stay in place.

#### TO CHANGE POSITION OF THE LEG REST LEVER

The leg rest lever can be moved to the opposite side of the table. First, remove the screws from the lever and replace the screws. Move the lever to the opposite side of the table. Remove the screws that are there and mount the lever.

## DIRECTIONS FOR USE

### MOVING THE TABLE



#### CAUTION

Before moving any of the tables, disconnect the power cord from the power outlet. The table weighs as much as 200 lbs. (91 kg.) Use extreme caution when lifting the table to move it. Two people are required to move the table safely. DO NOT use the table to transport a client.

The tables are equipped with two wheels at one end and two self-locking, molded rubber feet at the other. When ready to move the table, first lower the table to its lowest position. On models with a back rest, it is recommended to raise the back rest to a high position. Then be sure the power source is disconnected. Place the cord & all controls out of the way on top of your table before moving the table. Lay a towel or a cloth down on your table top to protect the surface from any debris from the bottom of your foot control.

Two people are required to safely move the table. Grasp the table frame securely at the end with the molded rubber feet. Raise the table to allow the wheels at the foot end to move freely. Bending at the knees before lifting to prevent back strain or possible injury.

Grasp the table frame securely here at both sides of the brace.



Move the table carefully to the next location, lower the table and release. Check the self-locking molded rubber feet to be sure they are flat side down. This position “locks” the table and allows sturdy height adjustments. Place the foot controls in position on the floor. Connect the power cord to the outlet and test the foot control.

### DUAL LOCKING CASTERS USE

All casters should be locked at all times during use with a client.



#### LOCKING THE CASTERS

1. Place your shoe on the end of the casters locking tab.
2. Press firmly downward until you hear a clicking noise and the caster is locked.



#### UN-LOCKING THE CASTERS

1. Place your shoe on top of the casters locking tab.
2. Press firmly inward and downward until you hear a clicking noise and the caster is unlocked.



## DIRECTIONS FOR USE

### REMOVING TOP PAD

The top pad has been designed to be easily removable and replaceable with no tools needed.

#### IF THE TABLE HAS A HEATED TOP:


Unplug the table from the wall outlet and disconnect the wires circled from the control box located under the platform. Pull the cables through the platform before completely removing the top pad.

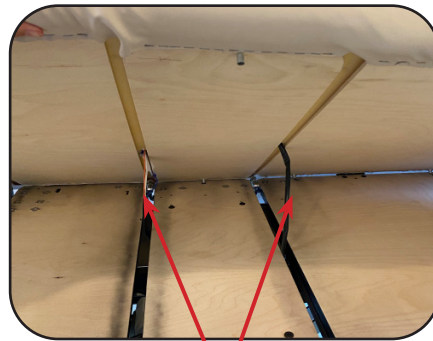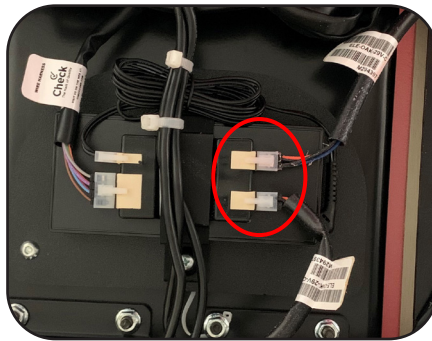


Heated Top Cables

#### TO REMOVE THE TOP PAD:

The top pad is attached to the platform with 8 thumb screws located below the platform as shown.

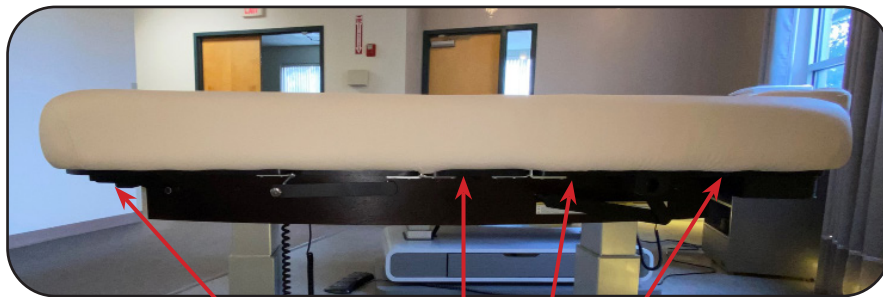

Thumb Screw Locations (4 per side)

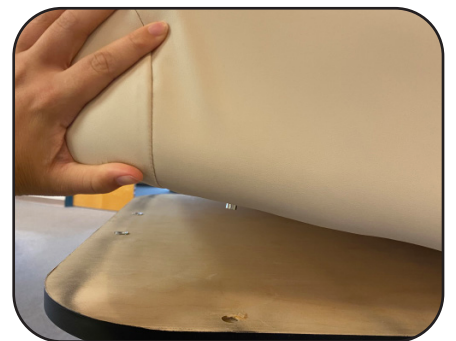

1. Unscrew the thumb screw clockwise until the thumb screw is completely removed. Repeat for all 8 thumb screws. If the thumb screws are on too tight, a 3/16" bit can be used.

2. Lift top pad off the platform.

## DIRECTIONS FOR USE

### ADJUSTABLE BREAST COMFORT (ABC) SYSTEM (OPTION)



#### CAUTION

- ABC System Weight Limit - 100 lbs. (45 kg.) Do not sit on the ABC System.
- Do not place foreign objects into the ABC System. Only use as intended.
- **For safety of your client, use a cloth sheet between the ABC System and your client.**

The OAKWORKS® Adjustable Breast Comfort (ABC) System is designed to lower the pressure on breasts and pectoral muscles, allowing the client to relax and create a more comfortable position for their spine. The height of the cushion is easily adjusted up and down in small increments by using the hand control. We recommend that the cushion height be adjusted in the following ways:

***\*Always start with the cushion top level with the top of the table for Prone or Supine Positioning\****



PRONE POSITIONING

In Prone positions, for male or female clients when the face rest is in use, lower the cushion approximately 3/4" at a time (This is approximately 1 second of lowering) and check in with the client regarding their comfort after making the change. Incrementally lower the cushion until the client reports they are comfortable. Sometimes going back up a little will be preferred. This whole process takes no more than 15-20 seconds. After lowering, check headrest position to ensure comfort & support. *NOTE: Breast size is not the only determinate of cushion location. Every person's comfort spot is different, regardless of breast size.*



SUPINE POSITIONING

When turning clients over in the supine position, you may use the cushion to level during or after their change of position. IT is not important that the cushion be completely level. As in prone positions, make small changes in height and check in with the client.



HEAD REST USE IN SUPINE



If you are using the head rest in the Supine position, you may use the cushion at relatively high heights to facilitate stretching for short periods of time. It is not recommended that clients experience this position for more than a few minutes.

## DIRECTIONS FOR USE

### INTEGRATED HEATED TOP (OPTION)

#### USING THE INTEGRATED HEATED TOP:

The table comes with the option for a fully integrated four section heated top pad. We recommended the use of a sheet or blanket on the client to achieve an evenly distributed heating effect. Simply press the heating indicator located on the right side of the table to the desired heat level. The heat can reach up to 43°C (110°F). The system comes equipped with an 8-hour automatic shutoff.

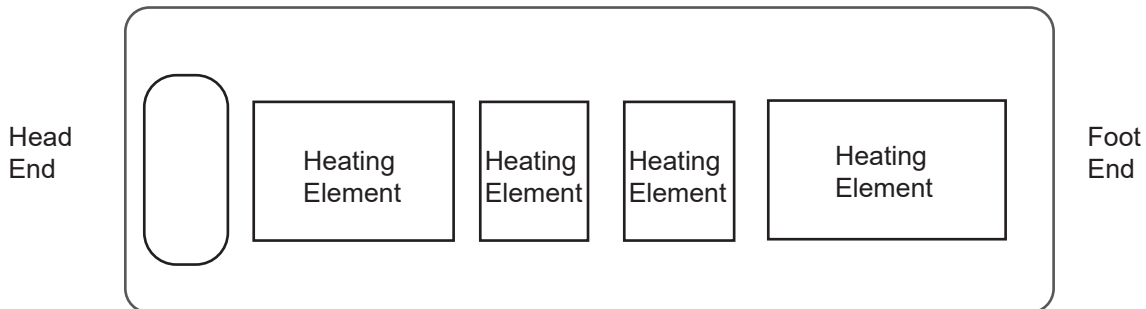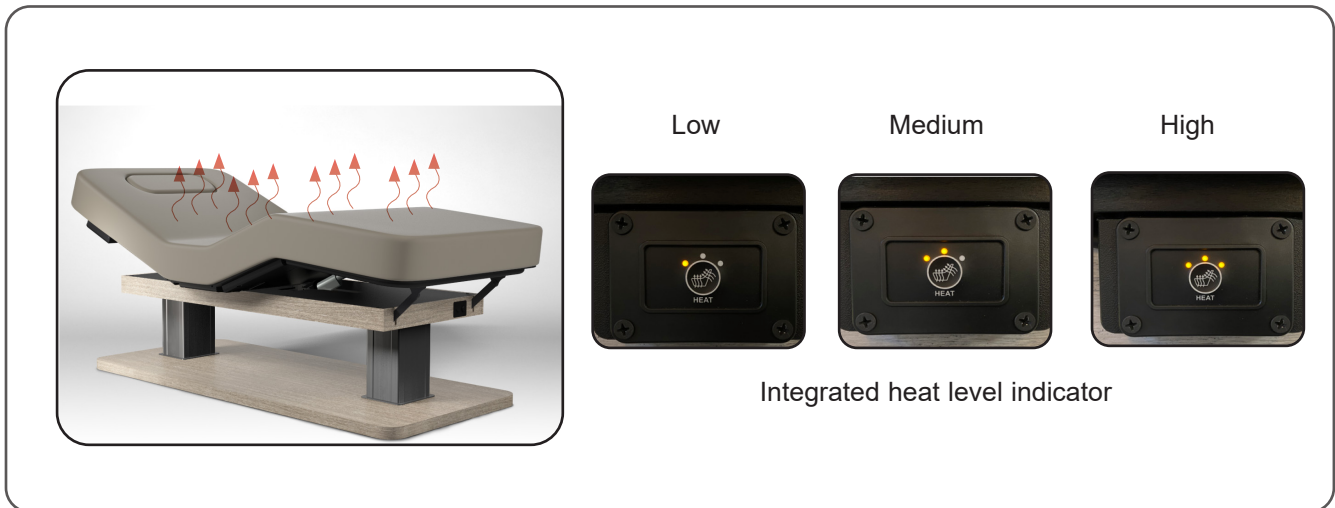

Heating Element Locations in the Pad.

#### Blinking lights

If the controller's heat level indicator lights are blinking, there are two different light patterns.

**Two blinking lights:** An intermittent connection in the heating circuit or the temperature sensing circuit could be faulty. Unplug the table and locate the control box on the underside of the tabletop. Disconnect the heating element connectors from the control box and reconnect. Plug the power cord back into the wall outlet.

**Three blinking lights:** This could indicate a poor power connection in the harnessing or could be inside the heating element.

The heating system "remembers" the fault and shuts down as a result. When unplugging power, the systems will "fix" it because the system cannot remember the fault when it is no longer powered. But the fault will return if it is a hard fault that is not resolved. Call the Technical Service line 717.235.6807 if the problem continues.

## DIRECTIONS FOR USE

### QuickLock FACE REST: (ACCESSORY OPTION)



#### CAUTION

- QuickLock Face Rest Weight Limit - 25 lbs (11.3 kg)
- Do not put excessive weight or pressure on the Face Rest.
- Excessive pressure can cause premature failure of the Face Rest.

Double articulating action provides nearly limitless positioning options with the QuickLock™ Face Rest. The adjustable pad takes pressure off sensitive facial areas while providing superb support. The QuickLock™ Face Rest can be used in both prone and supine positioning and folds out of the way when not in use. Adjustments are made easily by loosening the cam locks, adjusting for height and angle and then locking locks into that position. The table has a bracket at the head of the table for a variety of uses.




#### ATTACHING QUICKLOCK FACE REST:

When attaching the QuickLock™ Face Rest, slide the frame dowels into the bracket until bullet catches are snapped into place.

To remove the QuickLock™ Face Rest, gently pull the headrest by the dowels until it comes free. Set it safely aside or store it inside the under-table cabinet until needed.

To remove

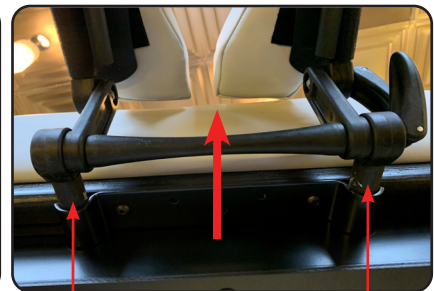

Pull by dowels


Pull by dowels

#### Tips for Great Positioning using the QuickLock™ Face Rest:

To use the face rest with your clients supine, rotate the face rest pad so that the thick part of the pad supports your client's cervical region. Adjusting the height and angle of the face rest gives your clients perfectly comfortable support.

The face pad is flexible so that you can bring the open ends together or spread them apart to achieve the most comfortable support for any size face. To avoid your client's chin from hitting the spacebar, make sure the pad is narrow enough to support their whole face.

For appropriate cervical flexion, use the cam locks to adjust the downward angle of the face rest, making sure that the surface of the face rest pad at the chin is not lower than the surface of the table.

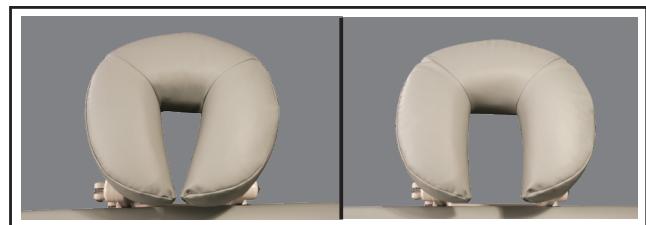

## DIRECTIONS FOR USE

### ADJUSTABLE SIDE ARM RESTS (ACCESSORY OPTION - SALON ONLY)



#### CAUTION

- Do not use the arm rest for client support during the mounting or dismounting of the chair.
- The arm rest is not designed to support the client's weight.

#### TO INSTALL THE ARM RESTS:




The Arm Rests adjust automatically as the back rest moves to remain parallel to the floor.



1. Insert end of arm rest into backrest hole while holding the arm rest at a 60° angle to the backrest.
2. Push end all the way into the hole and drop the arm rest into the horizontal position. Pull outward to make sure the arm rest is secure.

#### TO LEVEL THE ARM RESTS:

The Arm Rest height is adjusted at the factory for each table. If the armrest starts to sag with repeated use, follow the steps below to readjust.

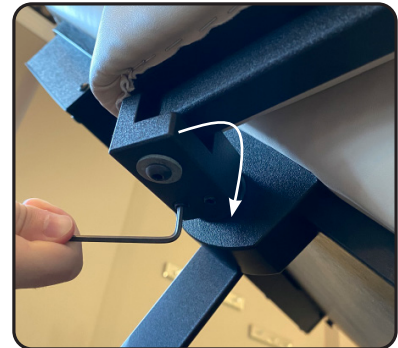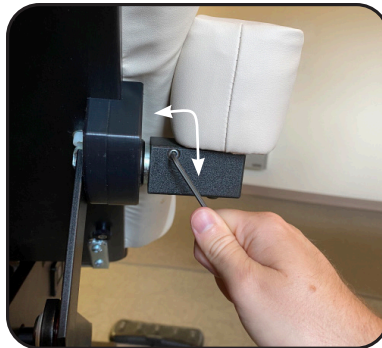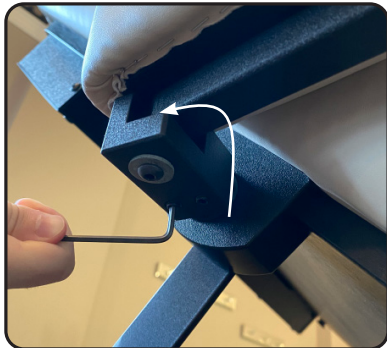

1. Loosen the bottom 2 set screws.
2. Turn the side set screw (clockwise to raise or counter-clockwise to lower) while adjusting the arm rest. Lift the arm rest slightly when doing this adjustment to reduce the weight.
3. Tighten the two bottom set screws to lock the position.

# CLEANING & DISINFECTION

---

## RECOMMENDED CLEANERS/DISINFECTANTS



### DANGER

To reduce the risk of electric shock:

- Always unplug this furnishing from the electrical outlet before cleaning.

Reference the Recommended Cleaners and Disinfectant list (MMINML0008-EN) that came with the table. This information can also be found at [www.shop.spatables.com](http://www.shop.spatables.com) under product information.

All cleaners and disinfectants have the ability to degrade the upholstery to some extent. However, following the recommended cleaner and disinfectant list and cleaning process will provide the best care for your table and support a long product life.

Oakworks recommends a prepackaged wipe for cleaners/disinfectants to ensure best distribution of disinfectant for the required kill time, without leaving excess residue and/or overexposing components therefore minimizing the potential for damage to materials. Please read and follow disinfectants manufacturers' directions for cleaning and disinfection.

Oakworks does NOT recommend the use of cleaners/disinfectants containing Hydrogen Peroxide, Acetic Acid, or Phenolics. These chemicals can cause damage to the appearance and/or material integrity of various components. Also, while the recommended cleaners/disinfectants list includes products containing Quaternary Ammonium compounds ("quats"), not all products containing quats are approved for use. Some contain additional detergents and/or surfactants which can damage some materials.

**Use of non-approved cleaners or disinfectants may lead to damage to upholstery and other materials found on the table and will void the warranty.**

## CLEANING PROCESS

Follow the cleaners/disinfectant manufacturers' directions for use. Please note that cleaning and disinfecting an Oakworks table is a two part process. First it must be cleaned of any visible soil, then it can be disinfected. Oakworks recommends that the table be positioned in the flat position during the cleaning process. Please follow this procedure for best results:

1. Using an approved cleaner or mild liquid soap and water, clean any visible soil off of the table, working from the top to the bottom of the table. It is recommended that the upholstery be cleaned at least once a week to prevent disinfectant build up.
2. Rinse with clean water and dry with a clean cloth or towel.
3. Using an approved disinfectant, thoroughly disinfect all surfaces of the tabletop and any high-contact areas such as handles, handsets, etc., making sure they remain wet for the disinfectant manufacturer's recommended contact time. Do not allow disinfectant to pool on the upholstery after the recommended contact time.
4. Wipe off any excess liquid with a cloth or towel and clean water.
5. Dry all surfaces with a clean cloth or towel.

Avoid using writing instruments or other similar instruments around the upholstery as it can cause permanent staining. If this does occur, do not wipe with an alcohol based cleaner. Instead, blot the stain with a clean cloth/ paper towel. Use a recommended cleaner or disinfectant to remove the stain. Follow this with a rinse of clean water.

## INSPECTIONS / WARRANTY


### INSPECTIONS

#### RECOMMENDED REGULAR INSPECTIONS (monthly or local standard)

- Check for damage to the power, hand control(s) and foot control(s) on all cables.
- Visually inspect components for obvious damage that could cause problems during operation.
- If the table is creaking/squeaking when raising and lowering, liberally lubricate the aluminum channels and slide block with a White Lithium grease.



- If the table is creaking/ squeaking during movement of the electric salon top, apply a small amount of lithium grease to the linkages and bushings indicated below. Be sure to wipe off any excess grease.

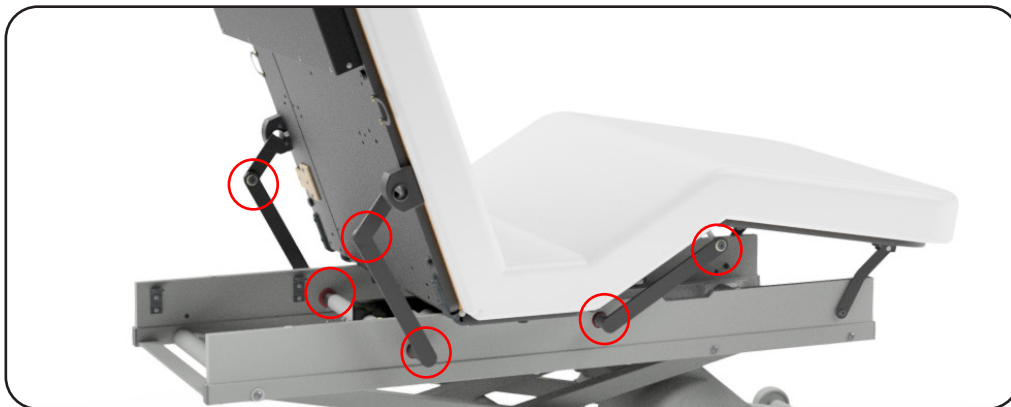

#### RECOMMENDED PERIODIC INSPECTIONS (yearly or local standard)

- Check for damage to the power, hands control and foot control cables and all visible wiring.
- Visually inspect components for obvious damage that could cause problems during operation.
- Check all mechanical functions using the hand control. Repeat using the foot control. Check for abnormal noises.
- Check that all fasteners are present and fastened securely.
- Check table grounding.
- Clean unusual buildup of dirt on the table and/or parts of the table not normally cleaned on a regular basis.
- Check for tears or cracks in the upholstery.

### WARRANTY

View complete warranty details at [www.shop.spatables.com](http://www.shop.spatables.com) under the Information tab “Warranty and Return Policy”.

# MODEL NUMBER & SERIAL NUMBER

## MODEL & SERIAL NUMBER




The model number and serial number are located on the underside of the foot section.

Model Number

Serial Number

### Proluxe, PX & PT Series Tables and EC Chairs



16796025 PXXA4EX1T410USXXXXXX


Proluxe Electric Salon w/ABC 1/T/4/10/US/XX/XX/XX

TTSKYBLUE 01/01/2020 Order#:654321

Notes: Sample Product Label

Ser#:PXR563146


120V~ 60Hz  
2.0 Amps Max



CONFORMS TO:  
ANSI/AAMI  
STD ES60601-1  
IEC STD 60601-1-6  
Certified to  
CAN/CSA STD  
C22.2 No. 60601-1


**Intertek**  
3034177


230V~ 50/60Hz  
 1.0 Amps Max  
 2.0 Amps Max  
 2.1 Amps Max  
 3.0 Amps Max




**OAKWORKS<sup>®</sup>, INC.**  
923 East Wellspring Rd.  
New Freedom, PA 17349 USA  
Phone: 717-235-6807  
[www.oakworks.com](http://www.oakworks.com)

made in the USA  
with US & imported parts







**Class 1 Equipment**


**Duty Cycle:**  
**MAX 2 minutes ON**  
**18 minutes OFF**

Part No. CN70537-9 - Rev. 2


Model Numbers and Serial Numbers always start with a letter.

# SPECIFICATIONS

## TABLE DIMENSION - ELECTRIC SALON & LIFT-ASSIST SALON

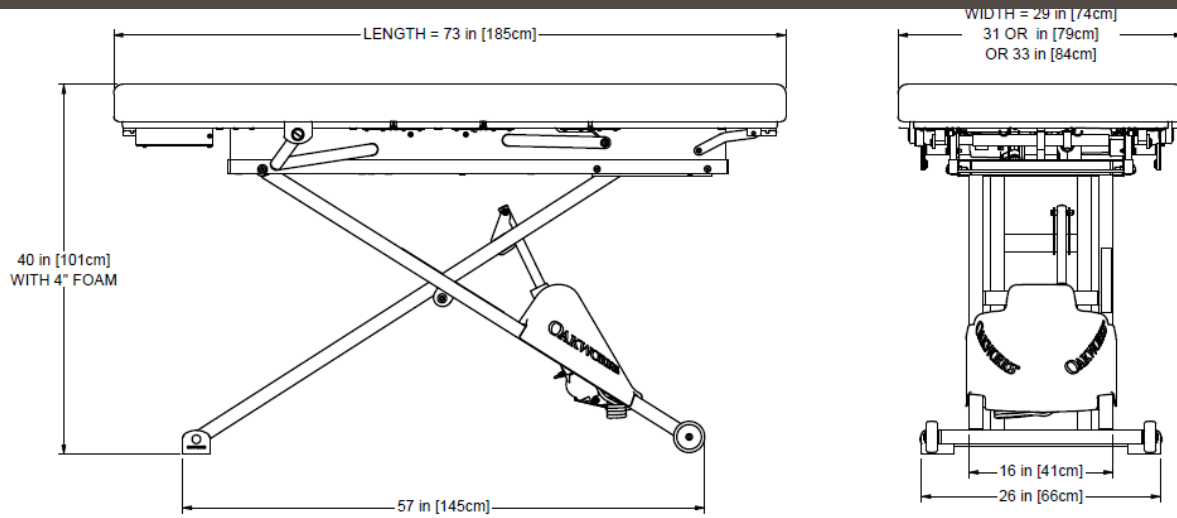

## TABLE DIMENSION - FLAT TOP & LIFT-ASSIST BACKREST

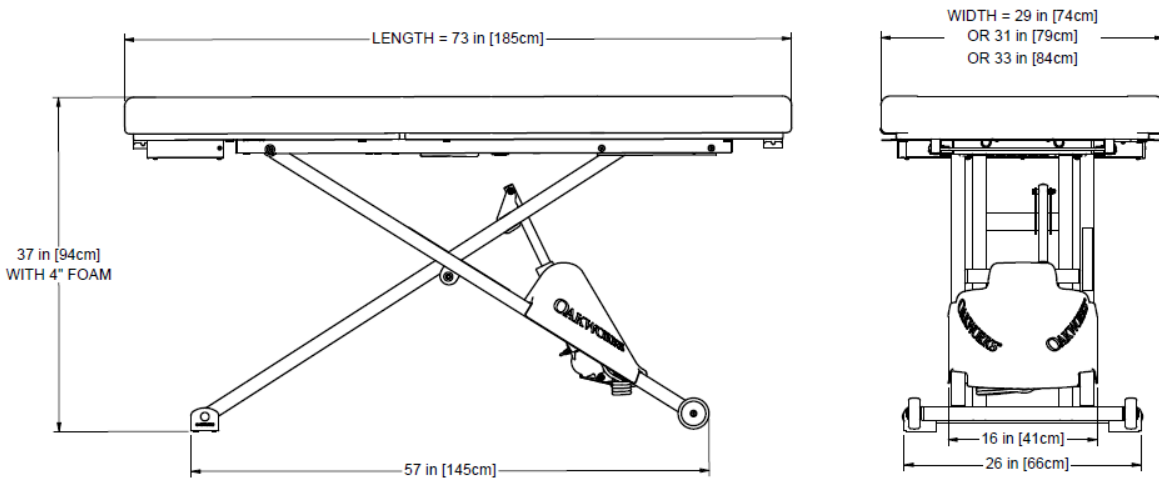

## SPECIFICATIONS


### PRODUCT SPECIFICATIONS

Table Weights:	151-200 lbs. (68-91 kg.)
Lifting Capacity	550 lbs. (250 kg.)

### ENVIRONMENTAL CONDITIONS

Conditions	Temperature	Humidity	Atmospheric Pressure
Normal Use	50° (10°C) to 104° (40°C)	20% to 60% RH	98 to 105 kPa
Storage & Transport	-20° (-29°C) to 135° (57°C)	20% to 95% RH	98 to 105 kPa

### ELECTRICAL SPECIFICATIONS

Designed for:	North America	Europe
Input Service	120 VAC/15 amp/60 Hz	230 VAC/10 amp/50/60 Hz
Current Draw	2.7 amps	1.5 amps
Maximum Momentary Current Consumption	9.0 amps	5.0 amps
Voltage Output to Actuators	24 VDC	24 VDC
Electric Shock Protection	Class 1 Equipment	
Tabletop Applied Part	 Type B Applied Part	
Ingress Protection Rating	IPX0	
Mode of Operation	Intermittent Operation MAX 2 minutes ON 18 minutes off	

## SPECIFICATIONS

### Guidance and manufacturer's declaration - electromagnetic emissions

The table is intended for use in the electromagnetic environment specified below. The customer or the user of the table should assure that it is used in such an environment.

Emissions Test	Compliance	Electromagnetic environment - guidance
RF emissions CISPR 11	Group 1	The table uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	The table is suitable for use in all establishments other than domestic and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Class A	
Voltage fluctuations / flicker emissions IEC 61000-3-3	Complies	

### Recommended separation distances between portable and mobile RF communications equipment and the table

The table is intended for use in the electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the table can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the table as recommended below, according to the maximum output of the communications equipment.

Rated maximum output power of transmitter  W	Separation distance according to frequency of transmitter (m)		
	150 kHz to 80 MHz  $d = 1.2 \sqrt{P}$	80 MHz to 800 MHz  $d = 1.2 \sqrt{P}$	800 MHz to 2.5 GHz  $d = 2.3 \sqrt{P}$
0.01	0.12	0.12	0.23
0.1	0.38	0.37	0.73
1	1.2	1.2	2.3
10	3.8	3.8	7.8
100	12	12	23

For transmitters rated at a maximum output power not listed above, the recommended separation distance  $d$  in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where  $P$  is maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.


NOTE 1 At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

## SPECIFICATIONS

Guidance and manufacturer's declaration - electromagnetic immunity			
The table is intended for use in the electromagnetic environment specified below. The customer or the user of the table should assure that it is used in such an environment.			
Immunity Test	IEC 60601 test level	Compliance level	Electromagnetic Environment - guidance
Electrostatic discharge (ESD) IEC 61000-4-2	±6 kV contact ±8 kV air	±6 kV contact ±8 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30 %.
Electrical fast transient/burst IEC 61000-4-4	±2 kV for power supply lines ±1 kV for input/output lines	±2 kV for power supply lines ±1 kV for input/output lines	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±1 kV differential mode ±2 kV common mode	±1 kV differential mode ±2 kV common mode	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	<5 % UT (>95 % dip in UT) for 0,5 cycle  40 % UT (60 % dip in UT) for 5 cycles  70 % UT (30 % dip in UT) for 25 cycles  <5 % UT (>95 % dip in UT) for 5 sec.	<5 % UT (>95 % dip in UT) for 0,5 cycle  40 % UT (60 % dip in UT) for 5 cycles  70 % UT (30 % dip in UT) for 25 cycles  <5 % UT (>95 % dip in UT) for 5 sec	Mains power quality should be that of a typical commercial or hospital environment. If the user of the table requires continued operation during power mains interruptions, it is recommended that the table be powered from an uninterruptible power supply or a battery.
Power frequency (50/60 Hz) magnetic field IEC 61000-4-8	3 A / m	3 A / m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
NOTE U <sub>T</sub> is the a.c. mains voltage prior to application of the test level.			

# SPECIFICATIONS

Guidance and manufacturer's declaration - electromagnetic immunity			
The table is intended for use in the electromagnetic environment specified below. The customer or the user of the table should assure that it is used in such an environment.			
Immunity Test	IEC 60601 test level	Compliance level	Electromagnetic Environment - guidance
<p>Conducted RF IEC 61000-4-6</p> <p>Radiated RF IEC 61000-4-3</p>	<p>3 Vrms 150 kHz to 80 MHz</p> <p>3 V/m 80 MHz to 2,5 GHz</p>	<p>3Vrms</p> <p>3V/m</p>	<p>Portable and mobile RF communications equipment should be used no closer to any part of the table, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.</p> <p>Recommended separation distance</p> <p><math>d = 1.2 \sqrt{P}</math></p> <p><math>d = 1.2 \sqrt{P}</math> 80 MHz to 800 MHz  <math>d = 2.3 \sqrt{P}</math> 800 MHz to 2,5 GHz</p> <p>Where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in meters (m).</p> <p>Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey, <sup>a</sup> should be less than the compliance level in each frequency range. <sup>b</sup></p> <p>Interference may occur in the vicinity of equipment marked with the following symbol:</p> 
NOTE 1 At 80 MHz and 800 MHz, the higher frequency range applies.			
NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.			
<p><sup>a</sup> Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the table is used exceeds the applicable RF compliance level above, the table should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as re-orienting or relocating the table</p> <p><sup>b</sup> Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 1 V/m.</p>			

This page intentionally left blank.

# USER MANUAL

---

# OAKWORKS® ProLuxe Series

## CONTACT INFORMATION:



**OAKWORKS® Inc.**

923 East Wellspring Road  
New Freedom, PA USA 17349

Phone: 717.235.6807

FAX: 717.235.6798

[www.oakworks.com](http://www.oakworks.com)

---



**Intertek**

3034177

CONFORMS TO:  
ANSI/AAMI STD ES60601-1  
IEC STD 60601-1 3RD EDITION  
IEC STD 60601-1-2 3RD EDITION  
IEC STD 60601-1-6 3RD EDITION  
CERTIFIED TO CAN/CSA STD C22.2 NO. 60601-1  
CB TEST CERTIFICATE AND REPORT

Original Instructions  
Manual Part Number: SPA-RA-PM-154  
Revision Level: 7  
Revision Date: 03/19/2024

English, Printed in USA



**OAKWORKS®** Spa