USER MANUAL

OAKWORKS®

Amani Series





© Copyright 2026
OAKWORKS®, Inc.

Copyright 2026

Notice

The information contained within this document is subject to change without notice and should not be construed as a commitment by OAKWORKS®, Inc.

OAKWORKS®, Inc. encourages requests for technical specifications and the like documentation to ensure accuracy. The appropriate documentation is available upon request.

OAKWORKS®, Inc. shall not be liable for incidental or consequential damages in connection with or arising out of the furnishing, performance, or use of this document and the program material which it describes.

Printed in U.S.A.

All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without prior written consent of OAKWORKS®, Inc.

OAKWORKS® is a registered trademark of OAKWORKS®, Inc.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS 4

PRODUCT USE DESCRIPTION 4
SYMBOL IDENTIFICATION 4

PRODUCT DESCRIPTION 7

Amani – TLX Premium Model 7

PRODUCT DESCRIPTION 8

Amani – TL Model 8

PRODUCT DESCRIPTION 9

Amani – Lounger (Fixed Height) Model 9

PRODUCT DESCRIPTION 10

CONTROL OPERATIONS 10

INSTALLATION 11

GROUNDING 11
EXTERNAL POWER RECEPTACLE 11

DIRECTIONS FOR USE 12

LEVELLING INSTRUCTIONS 12
MOVING THE PRODUCT 12
REMOVING THE TOP PAD 12
REMOVING THE TOP PAD 13
INTEGRATED HEATED TOP (OPTION) 14

CLEANING & DISINFECTION 15

RECOMMENDED CLEANERS/DISINFECTANTS 15
CLEANING PROCESS 15

INSPECTIONS & WARRANTY 16

INSPECTION 16
WARRANTY 16

MODEL NUMBER & SERIAL NUMBER 17

PRODUCT LABEL LOCATION 17

PRODUCT DIMENSIONS 18

PRODUCT DIMENSIONS & SPECIFICATIONS 19

PERMISSIBLE ENVIRONMENT CONDITIONS 19
ELECTRICAL SPECIFICATIONS 19

CONTACT INFORMATION: 20

PRODUCT USE DESCRIPTION

The Amani product series has two adjustable tables and a fixed height lounger for commercial use. The Amani product is intended to be used by trained professionals in a controlled environment. It is intended for indoor use only. The maximum weight capacity is 350 lbs.

A review of the following Safety Instructions is important for the safety of the operator and client. Read all instructions and understand this entire user manual before using the product. There are no known contraindications to the use of this product.

The product should not be used in any other manner than that described within this manual. Use of any unnecessary force or unauthorized procedures could result in injury to practitioner, client, or product.

SYMBOL IDENTIFICATION



This symbol, when used in this manual and on product labels, represents a caution warning. Be sure to read and comply with all precautions and warnings.



This symbol, when used in this manual and on product labels, warns against an electrical shock hazard. Be sure to observe and comply with all warnings.



This symbol, when used in this manual or on product labels, indicates a Protective Earth (Ground) Terminal.



This symbol, when used in this manual and on product labels, indicates the name and address of the manufacturer.



This symbol, when used in this manual or on product labels, indicates the country of manufacture along with date of manufacture of the device next to it.



This symbol, when used in this manual or on product labels, indicates alternating current (AC).



This symbol, when used in this manual or on product labels, indicates direct current (DC).



This symbol is used to indicate that the operator should consult the user manual.



This symbol indicates that when the end-user wishes to discard this product, it must be sent to separate collection facilities for recovery and recycling.

IMPORTANT SAFETY INSTRUCTIONS

DANGER

READ AND SAVE THESE INSTRUCTIONS

To reduce risk of electric shock:

1. Always unplug this product from the electrical outlet before cleaning.
2. Connect this product to a properly grounded outlet only. See Grounding Instructions in this manual.

Electrical Shock Hazard - The power supply/control module is located on the lift frame. No user serviceable parts are inside. Refer servicing to qualified personnel. Unplug the wall plug prior to contact with any cables connected to the power supply.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before adding or removing parts.
2. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact Oakworks Customer Service before use at 717.235.6807.
3. Keep the cord away from heated surfaces.
4. Never drop or insert any object into any opening.
5. Do not use it outdoors.
6. Use this product only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
7. Before disconnecting the power, turn all controls to the off position first, then remove the plug from outlet.
8. Improper connection of the product grounding conductor can result in a risk of electric shock. Check with a qualified electrician if you are in doubt as to whether the product is properly grounded.
9. Do not modify the plug provided with the product. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

WARNING


- Risk of Injury – do not exceed the 350 lbs. (158 kg.) maximum load limit.
- Risk of Injury - Do not operate this product unless properly trained.
- Close supervision is necessary when this product is used by, or near children, invalids, or disabled persons.
- This product is For Commercial Use Only and to be operated only by trained personnel.
- Lifting & Top motion electric motors are rated at 10% duty cycle max. (2 minutes on, 18 minutes off)

PINCH HAZARD

- Keep hands, feet, and controls away from the product while adjusting.
- Risk of Injury - Not to be used in locations where children or people with cognitive disabilities are anticipated to be present.
- Risk of Injury - Children should NEVER be near the product when in use.

ENTRAPMENT

Risk of Injury - The picture below indicates areas of entrapment that can occur when operating this product. It is the responsibility of the operator to ensure that bystanders are not in or around these areas during operation.

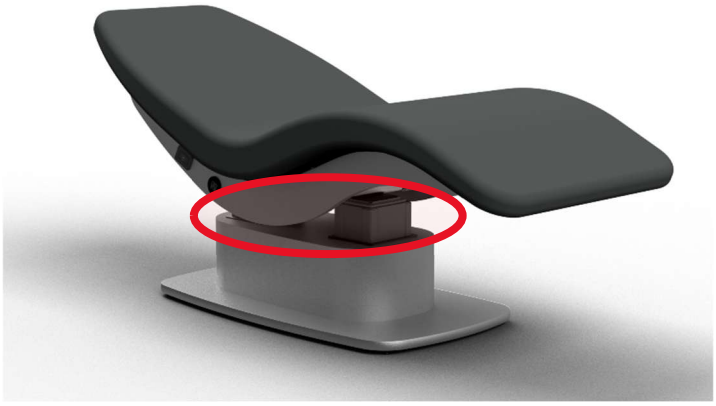

CAUTION

- The use of accessories, transducers, and cables other than those specified by the manufacturer, may result in increased emissions or decreased immunity to the product.
- The product should not be used adjacent to or stacked with other equipment. If adjacent or stacked use is necessary, the product should be observed to verify normal operation in the configuration in which it will be used.
- The product is designed to be a stand-alone lounger. This product must not be modified or incorporated into any other equipment.
- Proper operation of this product is very important for the safety of the operator, client, and any other individuals around this product. Directions for use of this product are described in this manual. The operator should read these sections carefully.
- Weight Limit: (client and accessories) 350 lbs. (158 kg.). Do not exceed.
- Be certain that the product is completely lowered without any tilt being present prior to discharging an ambulatory client. The client may lose balance and fall.
- When lowering the product, make sure there is nothing underneath the top that can impede motion (like stools, cabinets, accessory parts, cleaners, etc.). When using the product Height Up function, do not place anything between the metal frame and the base structure as damage can occur to the product.
- Mount and dismount the Amani lounger and tables from the center.
- Do not sit on backrest or footrest sections.
- Before moving the product, disconnect the power cord from the power outlet.
- The lounger and tables can weigh as much as 170 lbs. (77 kg.)
- Do not lift the product by grasping the top pad. This can damage the removable pad. Use extreme caution when lifting the product to move it. Four people are required to move the product safely.
- Do not use the product to transport a client.

Amani – TLX Premium Model



STANDARD SPECIFICATIONS	
Motion 1	Powered Height Range 21.9”-31.8” (55.6-80.7 cm.)
Motion 2	Powered Tilt Adjustment 8-41º
Hand Control	All powered motions
Voltage Options	120V/60Hz or 230V/50-60Hz
Capacity	350 lbs. (158 kg.) (Client and accessories)
Width	31” (79 cm.)
Length	75” (190 cm.)
Padding	4” (10 cm.) Aerocel Foam™
Product Weight	160-170 lbs. (72-77 kg.)
External Outlet	120V/60Hz or 230V/50-60Hz
Bolsters	Medium Neck Bolster, 7” Wide x 11” Long Small Neck Bolster, 5” Wide x 11” Long
Base Protector	Grey Starboard attached to the head end of the base, for protection against feet.
LED Accenting Lighting	LED lighting illuminates the base.
Integrated Heated Top	Temperature adjustable heated pad system.
SoVi Sound System	Acoustic and vibration system embedded in the pad.

OPTIONS
Fabric Type – Terra Touch, Ultraleather, or Pumice
ACCESSORIES
Head or Foot Fabric Cover

Amani – TL Model



STANDARD SPECIFICATIONS	
Motion 1	Powered Height Range 21.9”-31.8” (55.6-80.7 cm.)
Motion 2	Powered Tilt Adjustment 8-41º
Hand Control	All powered motions
Voltage Options	120V/60Hz or 230V/50-60Hz
Capacity	350 lbs. (158 kg.) (Client and accessories)
Width	31” (79 cm.)
Length	75” (190 cm.)
Padding	4” (10 cm.) Aerocel Foam™
Product Weight	160-170 lbs. (72-77 kg.)
External Outlet	120V/60Hz or 230V/50-60Hz
Bolsters	Medium Neck Bolster, 7” Wide x 11” Long Small Neck Bolster, 5” Wide x 11” Long
Base Protector	Grey Starboard attached to the head end of the base, for protection against feet.
LED Accenting Lighting	LED lighting illuminates the base.

OPTIONS
Fabric Type – Terra Touch, Ultraleather, or Pumice
Laminate Finishes
Integrated Heated Top
SoVi Sound System
ACCESSORIES
Head or Foot Fabric Cover

Amani – Lounger (Fixed Height) Model




STANDARD SPECIFICATIONS	
Voltage Options	120V/60Hz or 230V/50-60Hz
Capacity	350 lbs. (158 kg.) (Client and accessories)
Width	31” (79 cm.)
Length	75” (190 cm.)
Padding	4” (10 cm.) Aerocel Foam™
Product Weight	160-170 lbs. (72-77 kg.)
External Outlet	120V/60Hz or 230V/50-60Hz
Bolsters	Medium Neck Bolster, 7” Wide x 11” Long Small Neck Bolster, 5” Wide x 11” Long
Base Protector	Grey Starboard attached to the head end of the base, for protection against feet.
LED Accenting Lighting	LED lighting illuminates the base.

OPTIONS
Fabric Type – Terra Touch, Ultraleather, or Pumice
Laminate Finishes
Integrated Heated Top
SoVi Sound System
ACCESSORIES
Head or Foot Fabric Cover

CONTROL OPERATIONS

Amani offers height and tilt positioning with electronic ease. Operate the hand control as shown below to raise or lower the height or tilt the table.

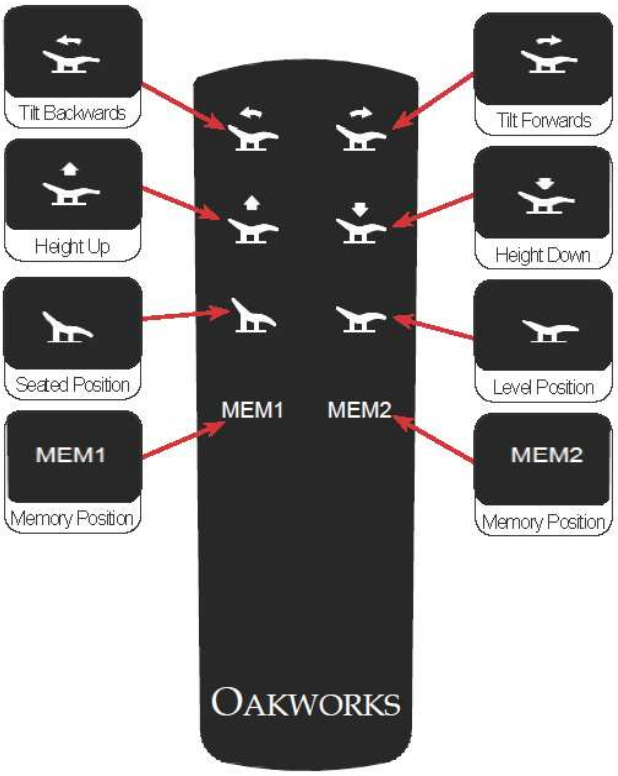

MEMORY FUNCTION USE

Use any of the function buttons to orient the table in a favorite position. To store the selected position in memory, press the MEM1 or MEM2 button twice in rapid succession and release. Two audible beeps will confirm that it has been set. Repeat this procedure if required until you hear the two beeps. To recall a stored position, press & hold the MEM button. Typically, people store a prone position, supine position, or lowest height for easy on/off for clients.

INSTALLATION

The Amani comes completely assembled and ready to use. Plug the cord into a functioning outlet that is rated for the product. (See Grounding below)


Arrange the power cord and control cords so that they will not create a tripping hazard.

Be sure access to the plug is not blocked for disconnecting the product from power.

GROUNDING

DANGER **Risk of Electric Shock**- Connect this furnishing to a properly grounded outlet only.

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electrical current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding pin. The pin must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. See U.S. sample below.

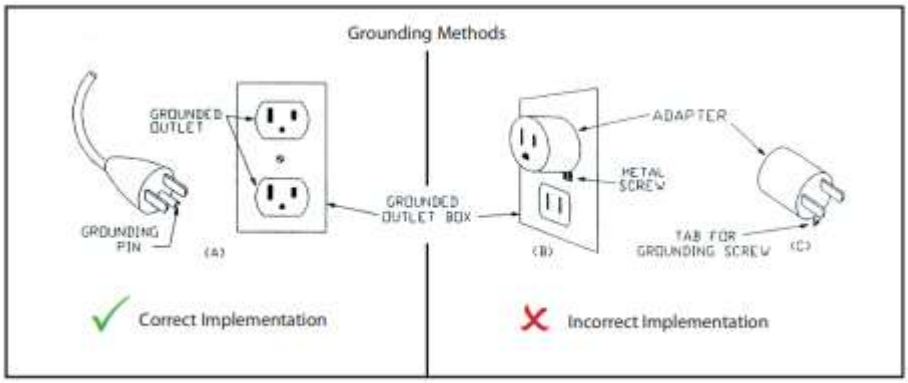

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet; have a proper outlet installed by a qualified electrician.

EXTERNAL POWER RECEPTACLE

External power outlet near the head end on the right side frame. The total electrical load of equipment plugged into the outlet is not to exceed 7 amps or 840 watts. Voltage may be different for other counties.



LEVELLING INSTRUCTIONS

1. Place the product in the location where you plan to use it.
2. Rock the product to determine if it is level with the floor. If the product rocks back and forth at all, the foot that clears the floor when you rock the product will need adjustment.
3. Adjust the Leveler Foot by first loosening the locking nut found just above the rubber Leveler Foot with the 1/2” open-end wrench.
4. Lower the adjustable rubber Leveler Foot until it meets the floor snugly. Tighten the locking nut against the leg of the lounger with the 1/2” open-end wrench to fix the Leveler Foot in position.
5. Rock the product again to be sure adjustments have stabilized the product. If necessary, make any additional adjustments in the same way.

MOVING THE PRODUCT

⚠ CAUTION **Before moving the product, disconnect the power cord from the power outlet. Secure the power cord and all hand or foot controls before moving. The product weighs as much as 170 lbs. (77 kg.) Four people are required to move the product safely**.

Never lift the Amani by grasping the top pad as the top is not designed to hold the weight of the base and you could damage the Amani and the electronics that run the product’s top.

If you need to move the product, place one person at each corner of the product. We recommend that you have the Amani top in the lowest height position. Have each person firmly grasp the top frame and lift the Amani. As when moving any piece of heavy equipment, bend at the knee and lift with your legs beneath you and not with your back. Be aware of and use proper, safe procedures for moving a product of this size to prevent injury to yourself or the Amani. We strongly recommend that a flatbed dolly be used that can hold the entire Amani if moving the Amani involves any large distance.

REMOVING THE TOP PAD


TO REMOVE THE TOP PAD: The top pad has been designed to be easily removable and replaceable. The top pad is attached to the platform with 8 hex screws (4 each side) located below the platform as shown (yellow arrows). A 5/32 in hex key or bit is required to remove the screws.






REMOVING THE TOP PAD


IF THE AMANI HAS A HEATED TOP: Unplug the product from the wall outlet. Disconnect the two connectors (circled) from the controller located under the platform. Pull the cables through the platform before removing the top pad.

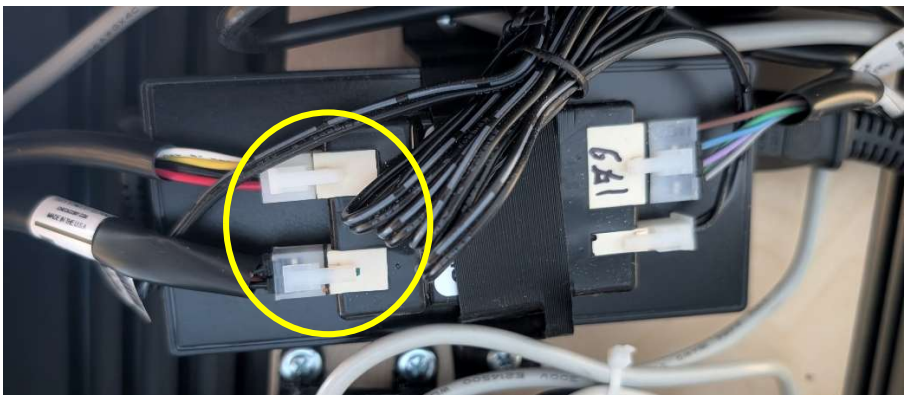

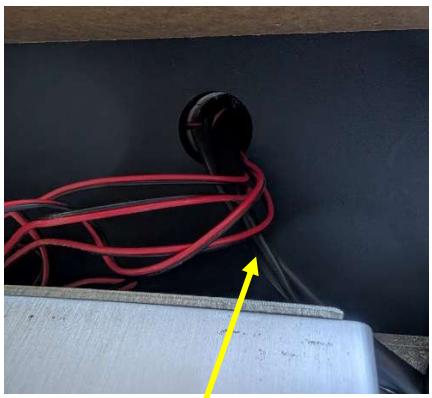

Heated Top Cables

IF THE AMANI HAS A SOVI SOUND SYSTEM: Unplug the product from the wall outlet. Disconnect the eight wire plugs (circled) from the amplifier box located under the platform. Pull the wires through the platform before completely removing the top pad.

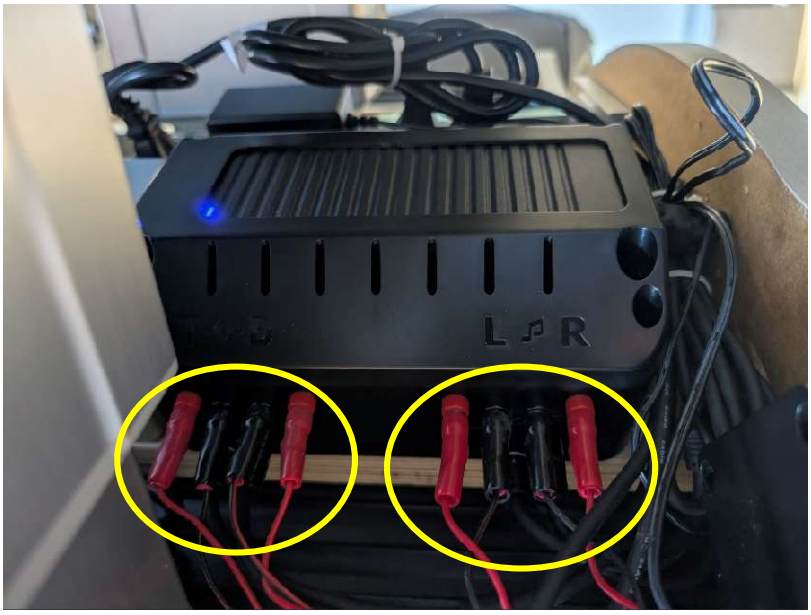





SoVi Cables

INTEGRATED HEATED TOP (OPTION)

USING THE INTEGRATED HEATED TOP: The product comes with the option of a fully integrated four section heated top pad. **We recommend the use of a sheet or blanket on the client to achieve an evenly distributed heating effect**. Simply press the heating indicator located on the right side of the lounger to the desired heat level. The heat can reach up to 43°C (110°F). The system comes equipped with an 8-hour automatic shutoff.

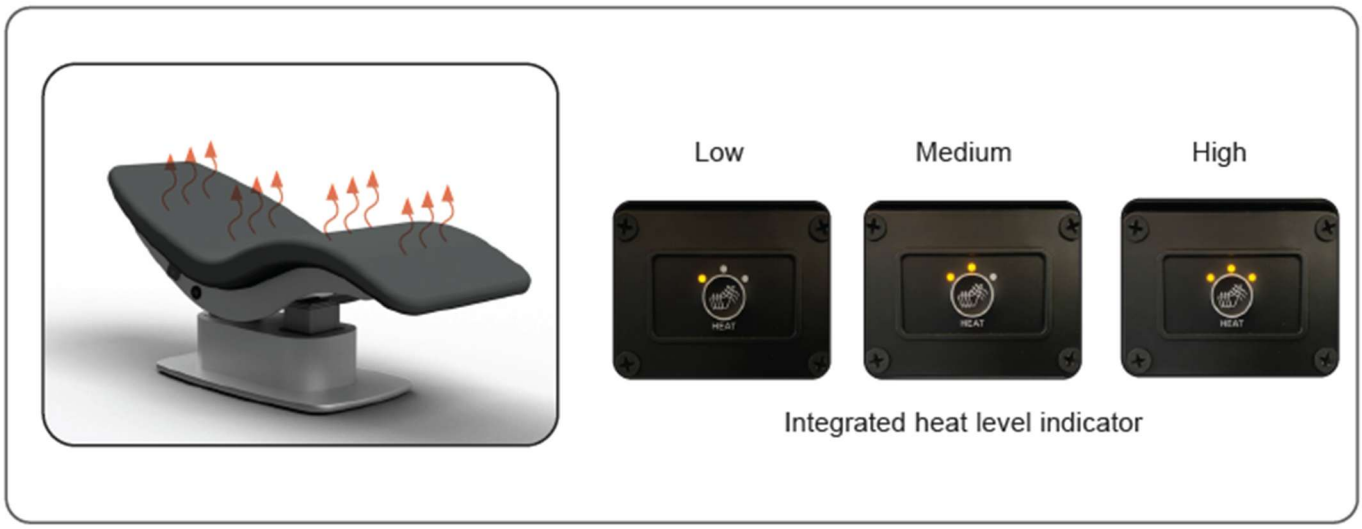

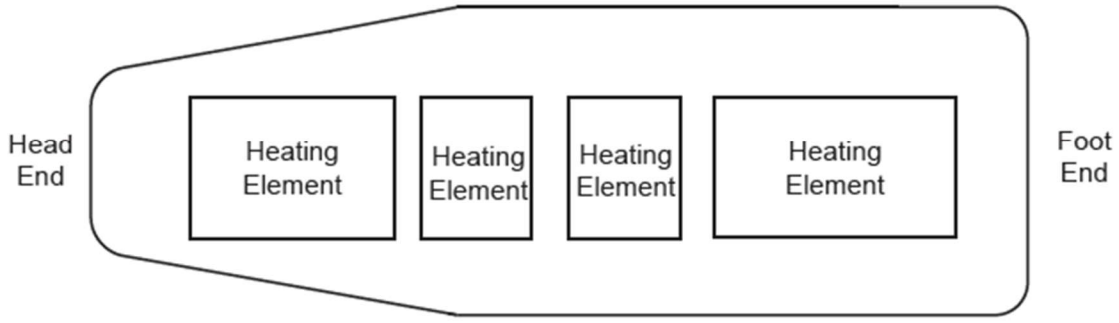

Heating Element Locations in the Pad.

BLINKING LIGHTS ON CONTRL PANEL:

If the controller's heat level indicator lights are blinking, there are two different light patterns.

Two blinking lights: An intermittent connection in the heating circuit or the temperature sensing circuit could be faulty. Unplug the lounger and locate the control box on the underside of the lounger top. Disconnect the heating element connectors from the control box and reconnect. Plug the power cord back into the wall outlet.

Three blinking lights: This could indicate a poor power connection in the harnessing or could be inside the heating element.

The heating system "remembers" the fault and shuts down as a result. When unplugging power, the systems will "fix" it because the system cannot remember the fault when it is no longer powered, but the fault can return if it is a hard fault that is not resolved. Call the OAKWORKS® Technical Service line 717.235.6807 if the problem continues.

RECOMMENDED CLEANERS/DISINFECTANTS



To reduce the risk of electric shock, always unplug this furnishing from the electrical outlet before cleaning.

Reference the Recommended Cleaners and Disinfectant list (MMINML0008-EN) found at www.massagetables.com under Customer Service at the bottom of the page. Select Recommended Cleaners to view the list.

All cleaners and disinfectants have the ability to degrade the upholstery to some extent. However, following the recommended cleaner and disinfectant list and cleaning process will provide the best care for your product and support a long product life.

OAKWORKS® recommends a prepackaged wipe for cleaners/disinfectants to ensure best distribution of disinfectant for the required kill time, without leaving excess residue and/or overexposing components therefore minimizing the potential for damage to materials. Please read and follow disinfectants manufacturers' directions for cleaning and disinfection.

OAKWORKS® does NOT recommend the use of cleaners/disinfectants containing Hydrogen Peroxide, Acetic Acid, or Phenolics. These chemicals can cause damage to the appearance and/or material integrity of various components. Also, while the recommended cleaners/disinfectants list includes products containing Quaternary Ammonium compounds (“quats”), not all products containing quats are approved for use. Some contain additional detergents and/or surfactants which can damage some materials.

Using unapproved cleaners or disinfectants may damage the upholstery and other product materials and will void the warranty.

CLEANING PROCESS

Follow the cleaners/disinfectant manufacturers' directions for use. Please note that cleaning and disinfecting an OAKWORKS® product is a two-part process. First, it must be cleaned of any visible soil, then it can be disinfected. OAKWORKS® recommends that the product be positioned in a flat position during the cleaning process. Please follow this procedure for best results:

1. Using an approved cleaner or mild liquid soap and water, clean any visible soil off the product, working from the top to the bottom of the product. It is recommended that the upholstery be cleaned at least once a week to prevent disinfectant build-up.
2. Rinse with clean water and dry with a clean cloth or towel.
3. Using an approved disinfectant, thoroughly disinfect all surfaces of the top and any high-contact areas such as handles, handsets, etc., making sure they remain wet for the disinfectant manufacturer's recommended contact time. Do not allow disinfectant to pool on the upholstery after the recommended contact time.
4. Wipe off any excess liquid with a cloth or towel and clean water.
5. Dry all surfaces with a clean cloth or towel.

Avoid using writing instruments or other similar instruments around the upholstery as it can cause permanent staining. If this does occur, do not wipe with an alcohol based cleaner. Instead, blot the stain with a clean cloth/ paper towel. Use a 10% bleach dilution to remove the stain. Follow this with a rinse of clean water.

INSPECTION

RECOMMENDED REGULAR INSPECTIONS (monthly or local standard)

- Check for damage to the power, hand control(s) and foot control(s) on all cables.
- Visually inspect components for obvious damage that could cause problems during operation.


RECOMMENDED PERIODIC INSPECTIONS (yearly or local standard)

- Check for damage to the power, hands control and foot control cables and all visible wiring.
- Visually inspect components for obvious damage that could cause problems during operation.
- Check all mechanical functions using hand control. Repeat using optional foot control if attached. Check for abnormal noises during operation.
- Check that all fasteners are present and fastened securely.
- Check lounger grounding.
- Clean unusual buildup of dirt on the product and/or parts of the product not normally cleaned on a regular basis.
- Check for tears or cracks in the upholstery.

WARRANTY

View complete warranty details on the Oakworks website; https://www.massagetables.com/. At the bottom of the page under Customer Service, select “Warranty and Returns” to view the policy.


PRODUCT LABEL LOCATION

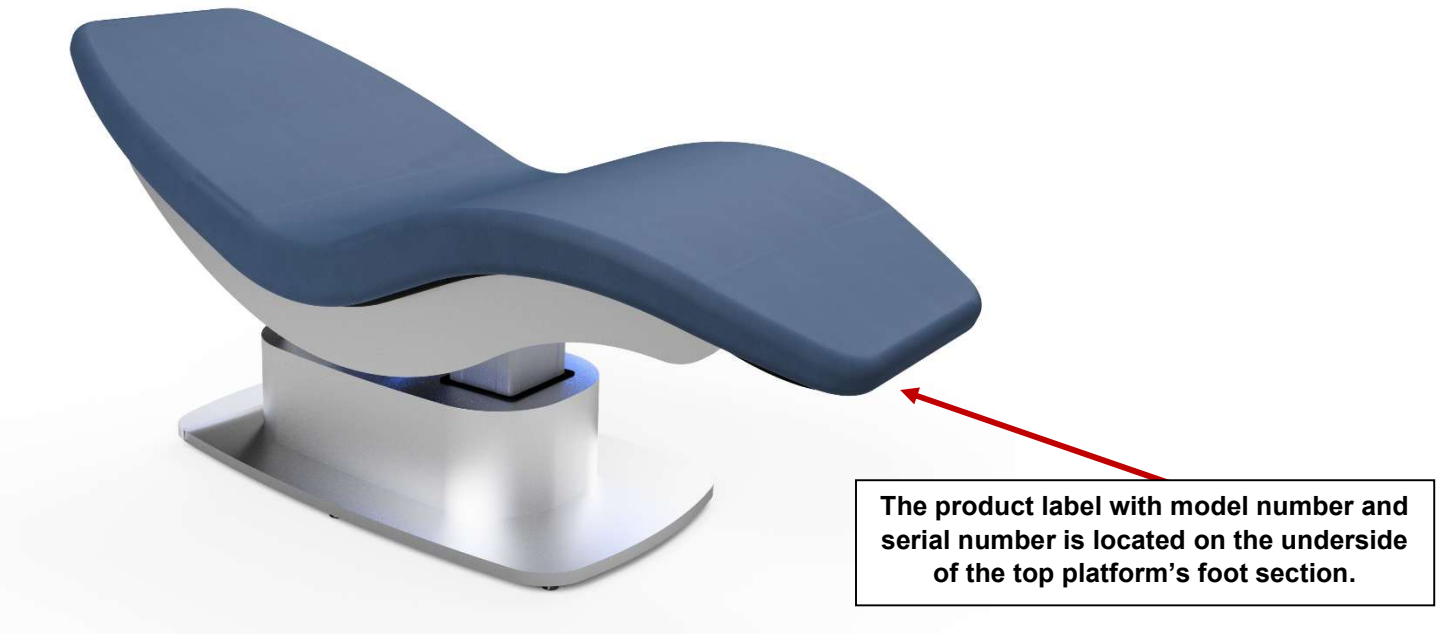


The product label with model number and serial number is located on the underside of the top platform's foot section.


Model Name


Serial Number

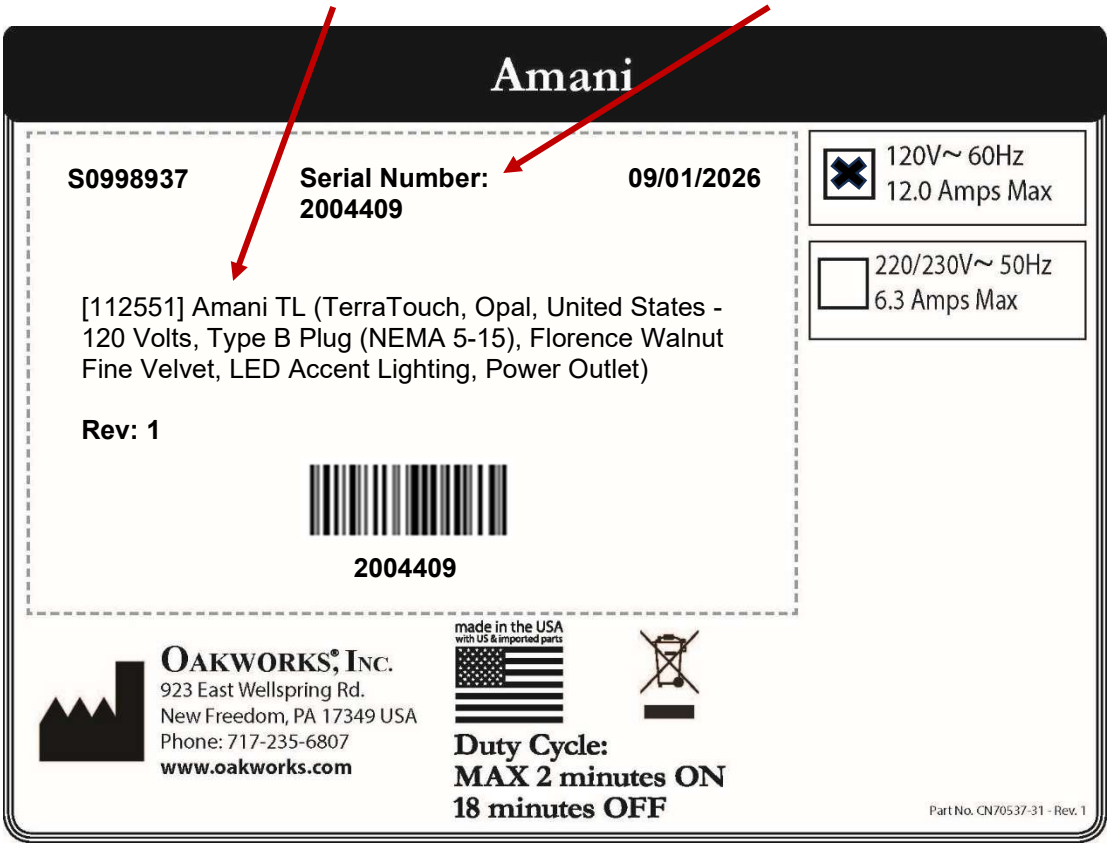



Amani – TLX & TL Models

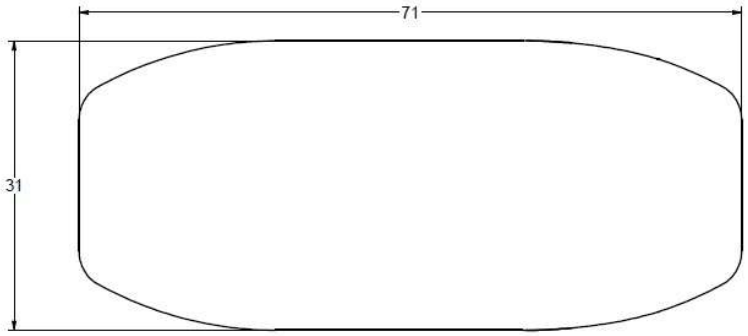


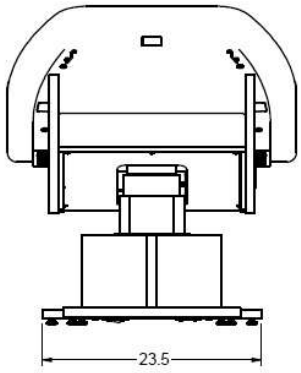

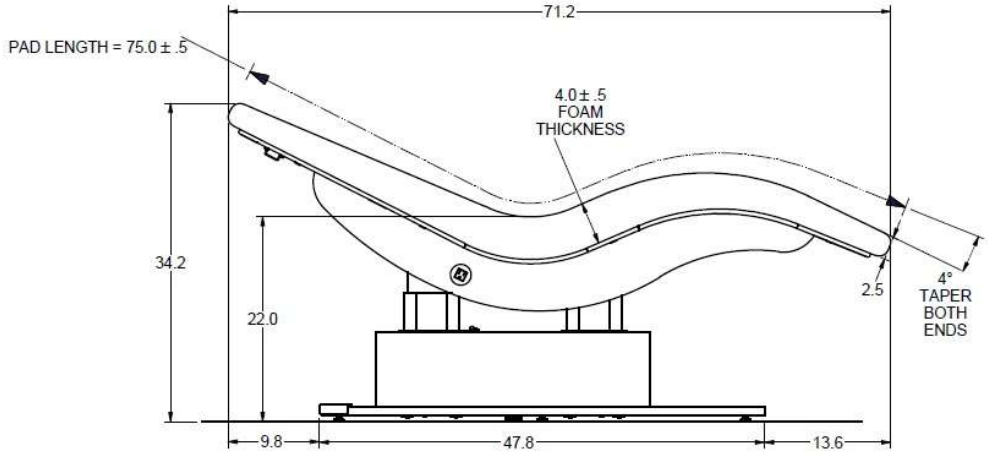


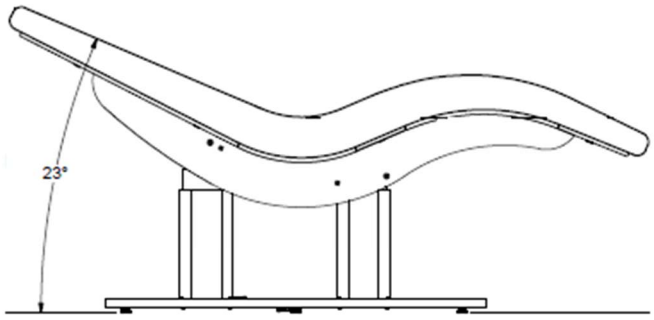

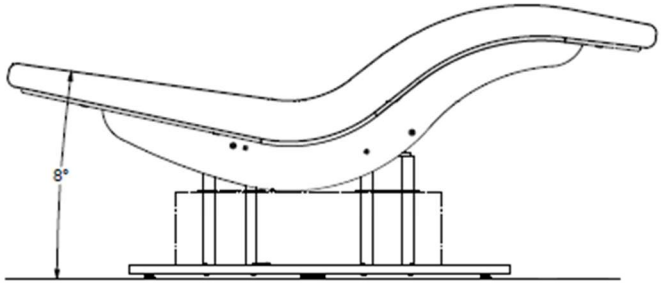

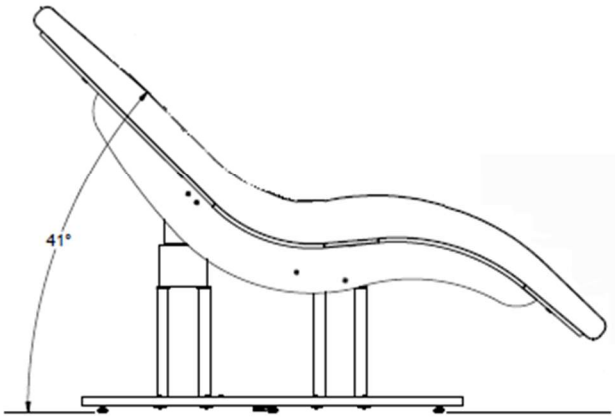

Amani – Lounger (Fixed Height) Model

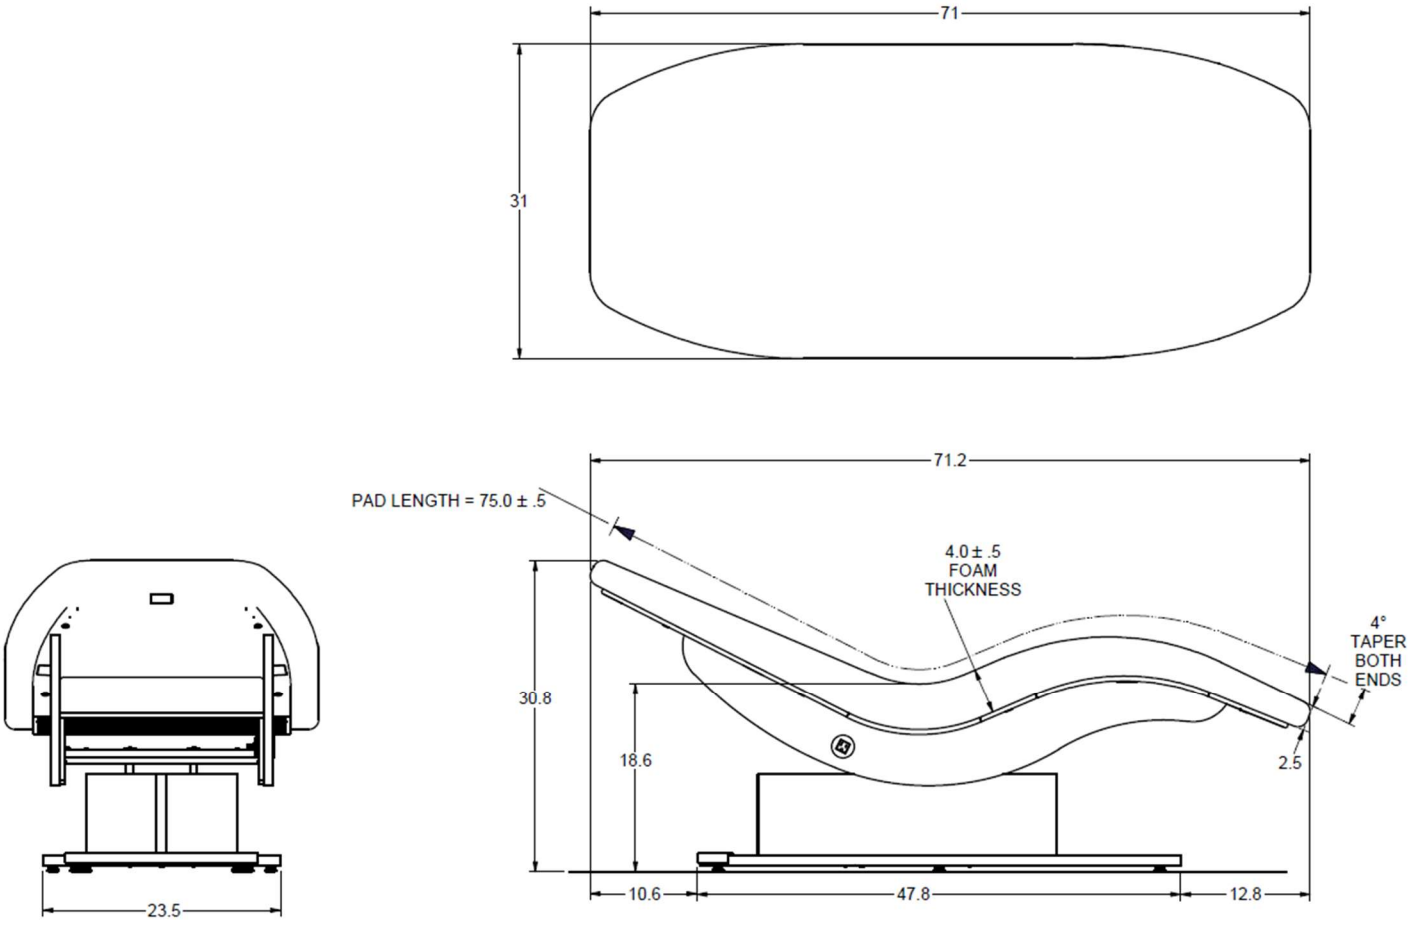

PERMISSIBLE ENVIRONMENT CONDITIONS

CONDITIONS	TEMPERATURE	HUMIDITY	ATMOSPHERIC PRESSURE
Normal Use	50° (10°C) to 104° (40°C)	20% to 60% RH	98 to 105 kPa
Storage & Transport	-20° (-29°C) to 135° (57°C)	20% to 95% RH	98 to 105 kPa

ELECTRICAL SPECIFICATIONS

DESIGNED FOR:	NORTH AMERICA	EUROPE
Input Service	120 V~ 60Hz, 15 Amps	230 V~ 50-60Hz, 8.3 Amps
Electric Shock Protection	Class 1 Equipment	
Mode of Operation	10% Duty Cycle Intermittent Operation, MAX 2 Minutes ON, 18 Minutes OFF	

OAKWORKS®

Amani

CONTACT INFORMATION:

OAKWORKS® Inc.
923 East Wellspring Road
New Freedom, PA USA 17349

Phone (717) 235-6807

FAX (717) 235-6798

www.oakworks.com

Original Instructions
Manual Part Number: SPA-RA-PM-174
Revision level: 2
Revision Date: 09/23/2026
English, Printed in USA